



MOTORCYCLE WARRANTY BOOKLET



ALIA INVESTMENTS (PVT) LTD

Dear Valued Customer,

Thank you for choosing Yamaha. We warmly welcome you to the team of proud Yamaha Motorcycle Owners. Being one of the best motorcycle brands in the world with motorcycle ranges from of 50cc to 1900cc, Yamaha motorcycles are distributed in over 170 countries.

We trust that you have chosen a model that is most suitable for your personal requirements. You are requested to maintain this booklet very safely as it has your copy of the warranty registration.

We also remind you of your responsibility of servicing your motorcycle according to the periodic inspection and service schedules provided, for the best performance & durability of your motorcycle, and for the maximum protection in the rare event of a warranty claim.

Please read carefully the warranty terms and service guidelines before using the motorcycle.

Enjoy riding your Yamaha Motorcycle.

About the Warranty Registration and Service Booklet

1. The customer shall keep this warranty card safe.
2. Alia Investments Pvt. Ltd will be referred to as ALIA hereafter.
3. The customer's copy of the warranty registration is included in this card.
4. This card has two main sections: Section A – Warranty Guidelines, and Section B – Owner's Manual.
5. To ensure the best performance, durability, and maximum warranty protection, it is essential to do all services for your motorcycle at the Yamaha Service Center.
6. Please bring the warranty card every time you visit the Yamaha Service Center for any repairs or services.
7. If this card is Misplaced or damaged under any circumstances, a fee will be charged for issuing a replacement.
8. If you sell this motorcycle, we request you to inform ALIA about the new owner and hand over this warranty card to the new owner for their records.

Scope of Warranty:

Warranty will be applicable only if :

1. The fault has resulted from the workmanship or material defect.
2. The fault happened in spite of following the ***Periodic Inspection and Service Schedule***. recommended by Yamaha.
3. It does not clash with the ***Exclusions to the warranty*** mentioned below.

Exclusion to the Warranty:

Warranty would not cover the Damages caused due to:

1. Normal corrosion (due to atmospheric effects).
2. Modification or tempering.
3. Accidents.
4. The use of contaminated petrol (fuel) or poor quality petrol (fuel).
5. Neglect of ***periodic inspection and service Schedule***.
6. Use of non-genuine parts, non recommended oil I lubricants.
7. Repair or Service under any circumstance by any other person(s) except Yamaha Service Centre or persons(s) authorized by ALIA.
8. Faults started after an accident, though the fault was not noticed immediately after the accident.
9. Improper transportation.
10. Any natural calamity (Flood, Lightening, Fire etc.) or any act caused by any external cause.

Warranty:

To obtain service under warranty, customer must bring the motorcycle to a Yamaha Motorcycle Service Centre together with the Warranty Card within 24 hours from the time of noticing the fault/defect.

To ensure best performance and durability and for the maximum protection under warranty:

1. It is essential to follow the regular service schedule at a Yamaha Service Center. Failure to do so will void the warranty.
2. Customers are required to bring the warranty card during every visit to the Yamaha Service Center for any repairs or service.

Warranty Conditions and Limitations:

1. Warranty service will be provided by ALIA, the sole distributor of Yamaha motorcycles for Rep. of Maldives.
2. Warranty period is 1 year or 12,000 km whichever is earlier.
3. Date of delivery is the date from which warranty period starts counting.
4. Warranty is applicable to motorcycles purchased directly from ALIA or any ALIA authorized reseller(s).
5. Warranty will be claimable only if all the Periodic Inspection and Service are done regularly at Yamaha Service Centre and the corresponding records are maintained at Yamaha Service Centre.
6. Service charges for the Periodic Inspection and Service will be at customer's costs as it is not due to a defect of the motorcycle.
7. In case of noticing any fault, ALIA should be informed as soon as possible.
8. In case of noticing any fault or malfunctioning, without any further use of the motorcycle, the customer shall bring the motorcycle to Yamaha Motorcycle Service Center together with the Warranty Card. If the motorcycle is used under faulty condition; the warranty would be void.
9. Furthermore, warranty would not cover the damages/faults caused under the conditions mentioned in the Exclusions to the warranty.
10. If any part is changed under warranty, the faulty/defective part will be the property of ALIA and it would not be returned to the customer.

Warranty Does Not Cover:

1. **Service Charges:**

Normal maintenance operations such as Engine tune-up, Decarburizing, Fuel System Cleaning, Wheels, Breaks and Clutch adjustments as well as other normal adjustments.

2. **Parts:**

Liquid and air cleaner elements, drive chains, spark plugs, fuel filters, oil filter elements, brake pads, break shoes, battery, light, fuses, step rubbers, tyres, tubes and other rubber parts.

3. **Lubricants:**

Oil, grease, battery electrolyte, radiator coolant, and any other items that may be specified by Yamaha.

4. Parts and service charges for the regular *periodic inspection and service Schedule*.

CONTACT DETAILS

Motorcycle Service Center

M. Alia, Handhuvaree Hingun, Male', Maldives

☎ (960) 333 6665

Sales

☎ (960) 729 1734

✉ mcsales@yamaha.aliamaldives.com

Service

☎ (960) 739 1734


✉ mcservice@yamaha.aliamaldives.com

Yamaha Showroom

M. Alia Building, Ground Floor, Male', Maldives

☎ (960) 300 9797 ☎ (960) 794 1734

✉ sales@yamaha.aliamaldives.com

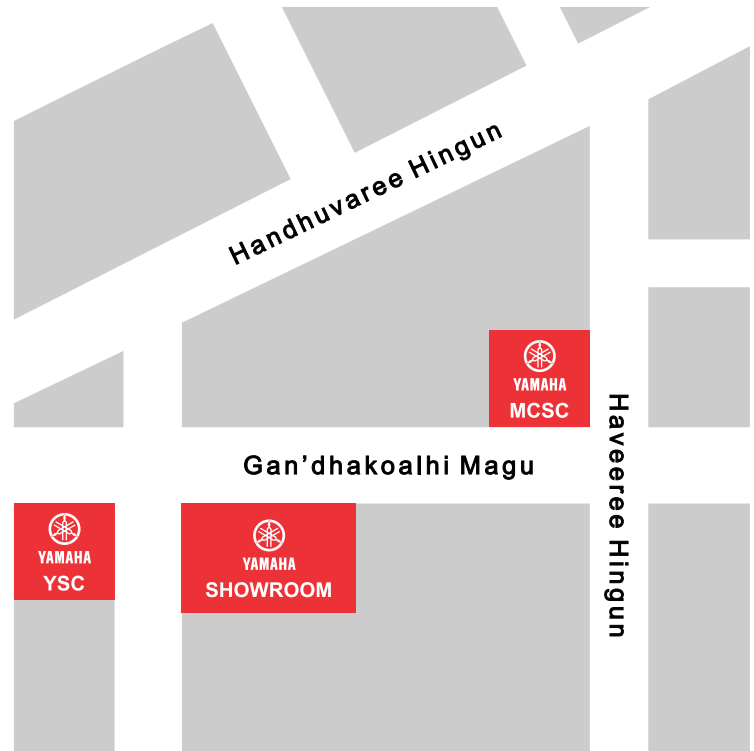

ALIA INVESTMENTS (PVT) LTD



⚠ Read this manual carefully before operating this vehicle.

OWNER'S MANUAL

ALL NEW
AEPOX 155^{VVA}
AEPOX S

GDR155
GDR155-A

BBP-F8199-EZ

 **Read this manual carefully before operating this vehicle. This manual should stay with this vehicle if it is sold.**

Welcome to the Yamaha world of motorcycling!

As the owner of the GDR155/GDR155-A, you are benefiting from Yamaha's vast experience and newest technology regarding the design and manufacture of high-quality products, which have earned Yamaha a reputation for dependability.

Please take the time to read this manual thoroughly, so as to enjoy all advantages of your GDR155/GDR155-A. The Owner's Manual does not only instruct you in how to operate, inspect and maintain your motorcycle, but also in how to safeguard yourself and others from trouble and injury.

In addition, the many tips given in this manual will help keep your motorcycle in the best possible condition. If you have any further questions, do not hesitate to contact your Yamaha dealer.

The Yamaha team wishes you many safe and pleasant rides. So, remember to put safety first!

Yamaha continually seeks advancements in product design and quality. Therefore, while this manual contains the most current product information available at the time of printing, there may be minor discrepancies between your motorcycle and this manual. If there is any question concerning this manual, please consult a Yamaha dealer.





Please read this manual carefully and completely before operating this motorcycle.

Important manual information

EAU10134

Particularly important information is distinguished in this manual by the following notations:

	This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.
 WARNING	A WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.
NOTICE	A NOTICE indicates special precautions that must be taken to avoid damage to the vehicle or other property.
TIP	A TIP provides key information to make procedures easier or clearer.

*Product and specifications are subject to change without notice.

**OWNER'S MANUAL
GDR155/GDR155-A
©2021 PT Yamaha Indonesia Motor
Manufacturing**



- Hematlah pemakaian bahan bakar minyak, gunakan knalpot sesuai standar pabrik, dan lakukanlah perawatan berkala sepeda motor anda di Bengkel Resmi Yamaha.
- Milikilah SIM, gunakan helm ber-SNI dan taati rambu lalu lintas pada saat berkendara.

Table of contents

Location of important labels	1-1	Instrument and control functions ...	7-1	Braking	9-3
Safety information	2-1	Main switch/steering lock	7-1	Tips for reducing fuel consumption	9-4
Further safe-riding points	2-5	Keyhole shutter	7-2	Parking	9-4
Helmets	2-6	Indicator lights and warning lights	7-2	Periodic maintenance and adjustment	10-1
Description	3-1	Multi-function meter unit.....	7-5	Tool kit.....	10-1
Left view	3-1	Handlebar switches	7-11	Periodic maintenance chart for the emission control system	10-2
Right view	3-2	Front brake lever.....	7-13	General maintenance and lubrication chart	10-3
Controls and instruments	3-3	Rear brake lever	7-13	Removing and installing panels....	10-7
Smart key system (GDR155-A)	4-1	Rear brake lever lock	7-13	Checking the spark plug.....	10-8
Smart key system.....	4-1	ABS (for ABS models).....	7-14	Engine oil and oil strainer	10-10
Operating range of the smart key system.....	4-2	Fuel tank cap	7-15	Final transmission oil	10-12
Handling of the smart key and mechanical keys	4-3	Fuel	7-16	Coolant	10-13
Smart key	4-4	Fuel tank overflow hose	7-17	Air filter and V-belt case air filter elements.....	10-15
Replacing the smart key battery....	4-6	Catalytic converter	7-17	Checking the throttle grip free play.....	10-17
Main switch	4-7	Seat.....	7-17	Valve clearance.....	10-17
Stop and Start System (GDR155-A)	5-1	Helmet holders.....	7-18	Tires	10-18
Stop and Start System	5-1	Storage compartments	7-19	Cast wheels	10-19
Stop and Start System operation...	5-1	Power outlet.....	7-20	Checking the front brake lever free play.....	10-20
Special features	6-1	Sidestand	7-21	Adjusting the rear brake lever free play.....	10-20
CCU (Communication Control Unit).....	6-1	Ignition circuit cut-off system	7-22	Checking the front brake pads and rear brake shoes	10-21
For your safety – pre-operation checks	8-1	Operation and important riding points	9-1	Checking the brake fluid level ...	10-22
Operation and important riding points	9-1	Engine break-in	9-1	Changing the brake fluid	10-23
Engine break-in	9-1	Starting the engine.....	9-2		
Starting the engine.....	9-2	Starting off	9-3		
Starting off	9-3	Acceleration and deceleration	9-3		
Acceleration and deceleration	9-3				

Table of contents


Checking the V-belt.....	10-23	Specifications	12-1
Checking and lubricating the cables.....	10-23	Consumer information	13-1
Checking and lubricating the throttle grip and cable.....	10-24	Identification numbers	13-1
Lubricating the front and rear brake levers.....	10-24	Vehicle data recording	13-2
Checking and lubricating the centerstand and sidestand	10-25	Index	14-1
Checking the front fork.....	10-25		
Checking the steering	10-26		
Checking the wheel bearings	10-26		
Battery	10-27		
Replacing the fuses.....	10-28		
Vehicle lights	10-30		
Replacing a front turn signal light bulb	10-30		
Replacing a rear turn signal light bulb	10-31		
Replacing the license plate light bulb	10-32		
Troubleshooting	10-32		
Troubleshooting chart	10-35		
Emergency mode (GDR155-A)....	10-37		
Motorcycle care and storage	11-1		
Matte color caution	11-1		
Care.....	11-1		
Storage.....	11-3		

Location of important labels

EAUN2190

1

Read and understand all of the labels on your vehicle. They contain important information for safe and proper operation of your vehicle. Never remove any labels from your vehicle.

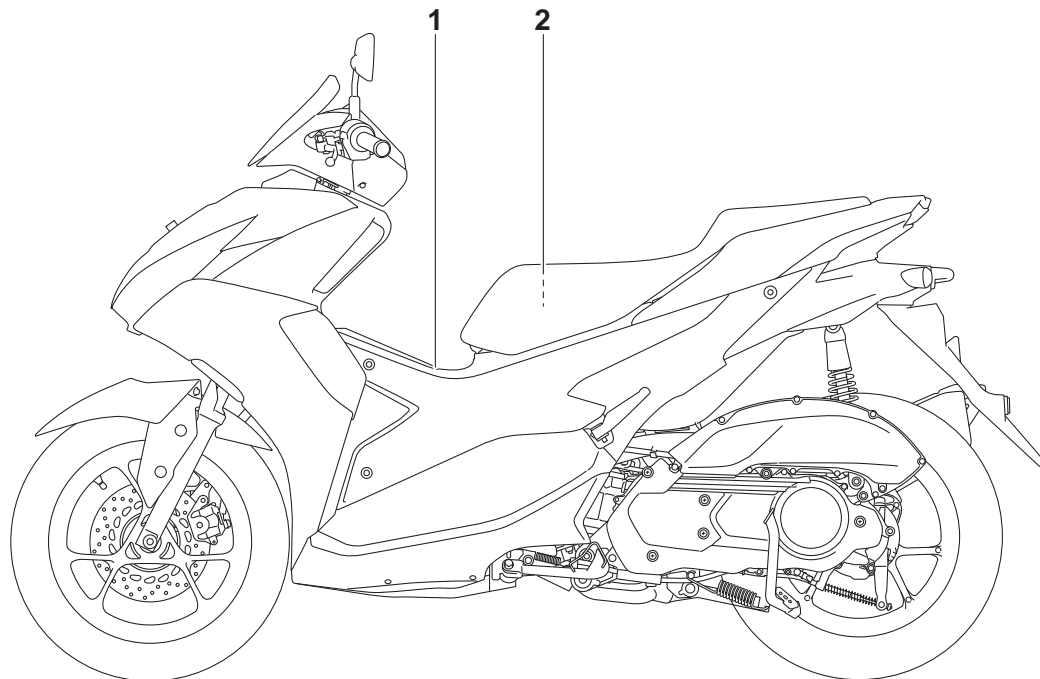

1

**PERINGATAN**



Sebelum mengendarai kendaraan,
baca dengan seksama buku
petunjuk pemilik.


BATAS BEBAN



Boks Depan : 0.2kg
Boks : 3kg

B65-F1568-00

2


100kPa=1bar



	kPa, psi	kPa, psi
	200, 29	225, 33
	200, 29	225, 33

1WD-F1668-01

1

Be a Responsible Owner

As the vehicle's owner, you are responsible for the safe and proper operation of your motorcycle.

Motorcycles are single-track vehicles. Their safe use and operation are dependent upon the use of proper riding techniques as well as the expertise of the operator. Every operator should know the following requirements before riding this motorcycle.

He or she should:

- Obtain thorough instructions from a competent source on all aspects of motorcycle operation.
- Observe the warnings and maintenance requirements in this Owner's Manual.
- Obtain qualified training in safe and proper riding techniques.
- Obtain professional technical service as indicated in this Owner's Manual and/or when made necessary by mechanical conditions.

- Never operate a motorcycle without proper training or instruction. Take a training course. Beginners should receive training from a certified instructor. Contact an authorized motorcycle dealer to find out about the training courses nearest you.

Safe Riding

Perform the pre-operation checks each time you use the vehicle to make sure it is in safe operating condition. Failure to inspect or maintain the vehicle properly increases the possibility of an accident or equipment damage. See page 8-1 for a list of pre-operation checks.

- This motorcycle is designed to carry the operator and a passenger.
- The failure of motorists to detect and recognize motorcycles in traffic is the predominating cause of automobile/motorcycle accidents. Many accidents have been caused by an automobile driver who did not see the motorcycle. Making yourself conspicuous ap-

pears to be very effective in reducing the chance of this type of accident.

Therefore:

- Wear a brightly colored jacket.
- Use extra caution when you are approaching and passing through intersections, since intersections are the most likely places for motorcycle accidents to occur.
- Ride where other motorists can see you. Avoid riding in another motorist's blind spot.
- Never maintain a motorcycle without proper knowledge. Contact an authorized motorcycle dealer to inform you on basic motorcycle maintenance. Certain maintenance can only be carried out by certified staff.

- Many accidents involve inexperienced operators. In fact, many operators who have been involved in accidents do not even have a current driver's license.
- Make sure that you are qualified and that you only lend your motorcycle to other qualified operators.
- Know your skills and limits. Staying within your limits may help you to avoid an accident.
- We recommend that you practice riding your motorcycle where there is no traffic until you have become thoroughly familiar with the motorcycle and all of its controls.
- Many accidents have been caused by error of the motorcycle operator. A typical error made by the operator is veering wide on a turn due to excessive speed or undercornering (insufficient lean angle for the speed).
- Always obey the speed limit and never travel faster than warranted by road and traffic conditions.
- Always signal before turning or changing lanes. Make sure that other motorists can see you.
- The posture of the operator and passenger is important for proper control.
- The operator should keep both hands on the handlebar and both feet on the operator footrests during operation to maintain control of the motorcycle.
- The passenger should always hold onto the operator, the seat strap or grab bar, if equipped, with both hands and keep both feet on the passenger footrests. Never carry a passenger unless he or she can firmly place both feet on the passenger footrests.
- Never ride under the influence of alcohol or other drugs.
- This motorcycle is designed for on-road use only. It is not suitable for off-road use.

Protective Apparel

The majority of fatalities from motorcycle accidents are the result of head injuries. The use of a safety helmet is the single most critical factor in the prevention or reduction of head injuries.

- Always wear an approved helmet.
- Wear a face shield or goggles. Wind in your unprotected eyes could contribute to an impairment of vision that could delay seeing a hazard.
- The use of a jacket, substantial shoes, trousers, gloves, etc., is effective in preventing or reducing abrasions or lacerations.
- Never wear loose-fitting clothes, otherwise they could catch on the control levers or wheels and cause injury or an accident.
- Always wear protective clothing that covers your legs, ankles, and feet. The engine or exhaust system become very hot during or after operation and can cause burns.
- A passenger should also observe the above precautions.

Safety information

2

Avoid Carbon Monoxide Poisoning

All engine exhaust contains carbon monoxide, a deadly gas. Breathing carbon monoxide can cause headaches, dizziness, drowsiness, nausea, confusion, and eventually death.

Carbon Monoxide is a colorless, odorless, tasteless gas which may be present even if you do not see or smell any engine exhaust. Deadly levels of carbon monoxide can collect rapidly and you can quickly be overcome and unable to save yourself. Also, deadly levels of carbon monoxide can linger for hours or days in enclosed or poorly ventilated areas. If you experience any symptoms of carbon monoxide poisoning, leave the area immediately, get fresh air, and SEEK MEDICAL TREATMENT.

- Do not run engine indoors. Even if you try to ventilate engine exhaust with fans or open windows and doors, carbon monoxide can rapidly reach dangerous levels.
- Do not run engine in poorly ventilated or partially enclosed areas such as barns, garages, or carports.

- Do not run engine outdoors where engine exhaust can be drawn into a building through openings such as windows and doors.

Loading

Adding accessories or cargo to your motorcycle can adversely affect stability and handling if the weight distribution of the motorcycle is changed. To avoid the possibility of an accident, use extreme caution when adding cargo or accessories to your motorcycle. Use extra care when riding a motorcycle that has added cargo or accessories. Here, along with the information about accessories below, are some general guidelines to follow if loading cargo to your motorcycle:

The total weight of the operator, passenger, accessories and cargo must not exceed the maximum load limit.

Operation of an overloaded vehicle could cause an accident.

Maximum load:
153 kg (337 lb)

When loading within this weight limit, keep the following in mind:

- Cargo and accessory weight should be kept as low and close to the motorcycle as possible. Securely pack your heaviest items as close to the center of the vehicle as possible and make sure to distribute the weight as evenly as possible on both sides of the motorcycle to minimize imbalance or instability.
- Shifting weights can create a sudden imbalance. Make sure that accessories and cargo are securely attached to the motorcycle before riding. Check accessory mounts and cargo restraints frequently.
- Properly adjust the suspension for your load (suspension-adjustable models only), and check the condition and pressure of your tires.
- Never attach any large or heavy items to the handlebar, front fork, or front fender. Such items can create unstable handling or a slow steering response.

- **This vehicle is not designed to pull a trailer or to be attached to a sidecar.**

Genuine Yamaha Accessories

Choosing accessories for your vehicle is an important decision. Genuine Yamaha accessories, which are available only from a Yamaha dealer, have been designed, tested, and approved by Yamaha for use on your vehicle.

Many companies with no connection to Yamaha manufacture parts and accessories or offer other modifications for Yamaha vehicles. Yamaha is not in a position to test the products that these aftermarket companies produce. Therefore, Yamaha can neither endorse nor recommend the use of accessories not sold by Yamaha or modifications not specifically recommended by Yamaha, even if sold and installed by a Yamaha dealer.

Aftermarket Parts, Accessories, and Modifications

While you may find aftermarket products similar in design and quality to genuine Yamaha accessories, recog-

nize that some aftermarket accessories or modifications are not suitable because of potential safety hazards to you or others. Installing aftermarket products or having other modifications performed to your vehicle that change any of the vehicle's design or operation characteristics can put you and others at greater risk of serious injury or death. You are responsible for injuries related to changes in the vehicle.

Keep the following guidelines in mind, as well as those provided under "Loading" when mounting accessories.

- Never install accessories or carry cargo that would impair the performance of your motorcycle. Carefully inspect the accessory before using it to make sure that it does not in any way reduce ground clearance or cornering clearance, limit suspension travel, steering travel or control operation, or obscure lights or reflectors.
- Accessories fitted to the handlebar or the front fork area can create instability due to improper weight distribution or aerody-

namic changes. If accessories are added to the handlebar or front fork area, they must be as lightweight as possible and should be kept to a minimum.

- Bulky or large accessories may seriously affect the stability of the motorcycle due to aerodynamic effects. Wind may attempt to lift the motorcycle, or the motorcycle may become unstable in cross winds. These accessories may also cause instability when passing or being passed by large vehicles.
- Certain accessories can displace the operator from his or her normal riding position. This improper position limits the freedom of movement of the operator and may limit control ability, therefore, such accessories are not recommended.
- Use caution when adding electrical accessories. If electrical accessories exceed the capacity of the motorcycle's electrical system, an electric failure could re-

Safety information

2

sult, which could cause a dangerous loss of lights or engine power.

Aftermarket Tires and Rims

The tires and rims that came with your motorcycle were designed to match the performance capabilities and to provide the best combination of handling, braking, and comfort. Other tires, rims, sizes, and combinations may not be appropriate. Refer to page 10-18 for tire specifications and more information on replacing your tires.

Transporting the Motorcycle

Be sure to observe following instructions before transporting the motorcycle in another vehicle.

- Remove all loose items from the motorcycle.
- Point the front wheel straight ahead on the trailer or in the truck bed, and choke it in a rail to prevent movement.
- Secure the motorcycle with tie-downs or suitable straps that are attached to solid parts of the motorcycle, such as the frame or up-

per front fork triple clamp (and not, for example, to rubber-mounted handlebars or turn signals, or parts that could break). Choose the location for the straps carefully so the straps will not rub against painted surfaces during transport.

- The suspension should be compressed somewhat by the tie-downs, if possible, so that the motorcycle will not bounce excessively during transport.

EAU57610

Further safe-riding points

- Be sure to signal clearly when making turns.
- Braking can be extremely difficult on a wet road. Avoid hard braking, because the motorcycle could slide. Apply the brakes slowly when stopping on a wet surface.
- Slow down as you approach a corner or turn. Once you have completed a turn, accelerate slowly.
- Be careful when passing parked cars. A driver might not see you and open a door in your path.
- Railroad crossings, streetcar rails, iron plates on road construction sites, and manhole covers become extremely slippery when wet. Slow down and cross them with caution. Keep the motorcycle upright, otherwise it could slide out from under you.
- The brake pads or linings could get wet when you wash the motorcycle. After washing the motorcycle, check the brakes before riding.

- Always wear a helmet, gloves, trousers (tapered around the cuff and ankle so they do not flap), and a brightly colored jacket.
- Do not carry too much luggage on the motorcycle. An overloaded motorcycle is unstable. Use a strong cord to secure any luggage to the carrier (if equipped). A loose load will affect the stability of the motorcycle and could divert your attention from the road. (See page 2-3.)

Helmets

Operating this vehicle without an approved motorcycle helmet increases your chances of a severe head injury or death in the event of an accident. The majority of fatalities from motorcycle or scooter accidents are the result of head injuries. The use of a safety helmet is the single most critical factor in the prevention or reduction of head injuries.

Always select an approved motorcycle helmet

Pay attention to the following when choosing a motorcycle helmet.

- The helmet must meet the safety standard “SNI”.
- The helmet size must match the size of the rider’s head.
- Never subject a helmet to heavy shocks.

Wearing the helmet correctly

Always connect the chin strap. In the case of an accident, the helmet has a much less chance of coming off if the chin strap is connected.

EAUN0213

Correct usage



ZAUU0003

Wrong usage




ZAUU0007

Types of helmets and their usage

- Full-type: use only for riding at low to mid-range speeds

Safety information

2

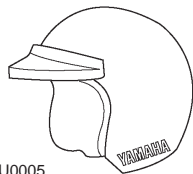


ZAUU0005

- Full-face-type: use for riding at mid-range to high speeds



ZAUU0006

Left view

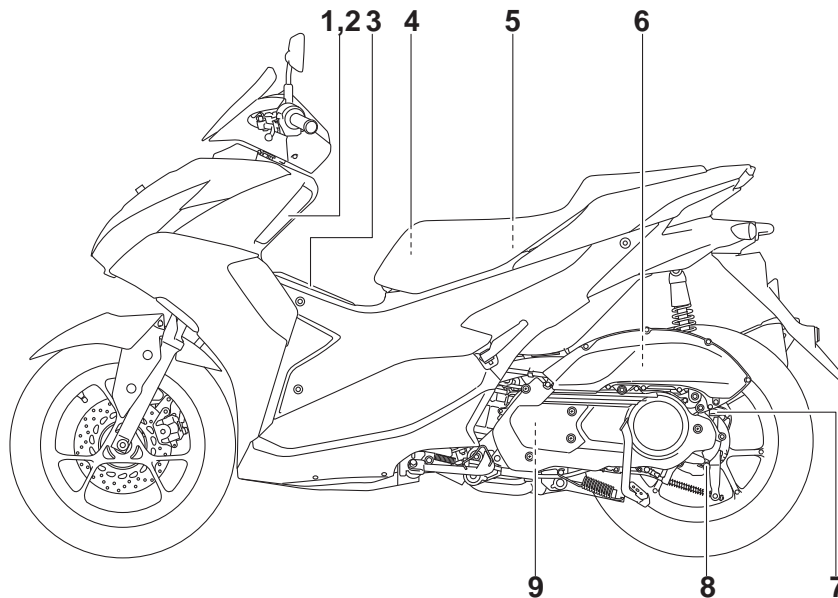

- 1. Front storage compartment (page 7-19)
- 2. Power outlet (page 7-20)
- 3. Fuel tank cap (page 7-15)
- 4. Tool kit (page 10-1)
- 5. Rear storage compartment (page 7-19)
- 6. Air filter element (page 10-15)
- 7. Final transmission oil filler cap (page 10-12)
- 8. Final transmission oil drain bolt (page 10-12)


- 9. V-belt case air filter element (page 10-15)

Description

EAU10421

Right view

3

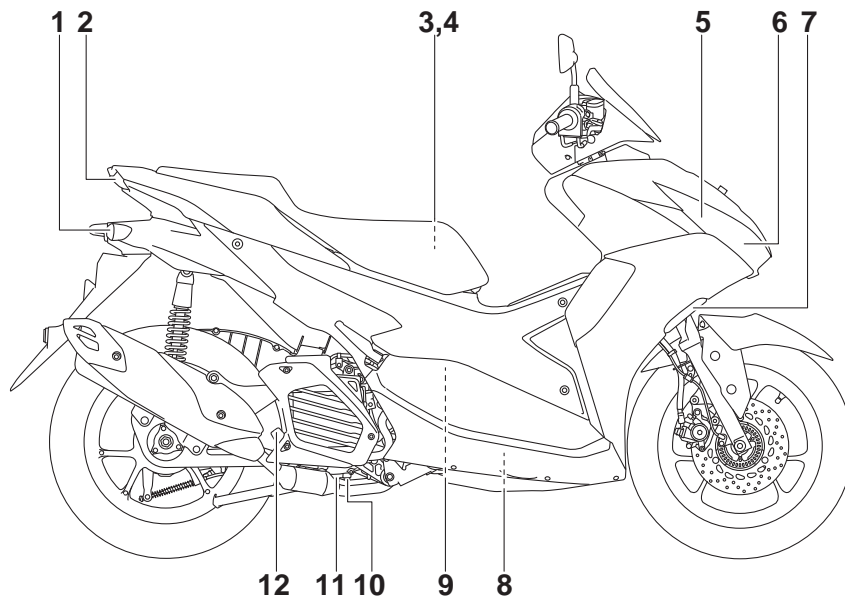


- 1. Rear turn signal lights (page 10-31)
- 2. Tail/brake light
- 3. Battery (page 10-27)
- 4. Fuse box (page 10-28)
- 5. Auxiliary light
- 6. Headlight (page 10-30)
- 7. Front turn signal light (page 10-30)
- 8. Coolant reservoir (page 10-13)

- 9. Spark plug (page 10-8)
- 10. Engine oil drain bolt A (page 10-10)
- 11. Engine oil drain bolt B (page 10-10)
- 12. Engine oil filler cap (page 10-10)

Controls and instruments

GDR155

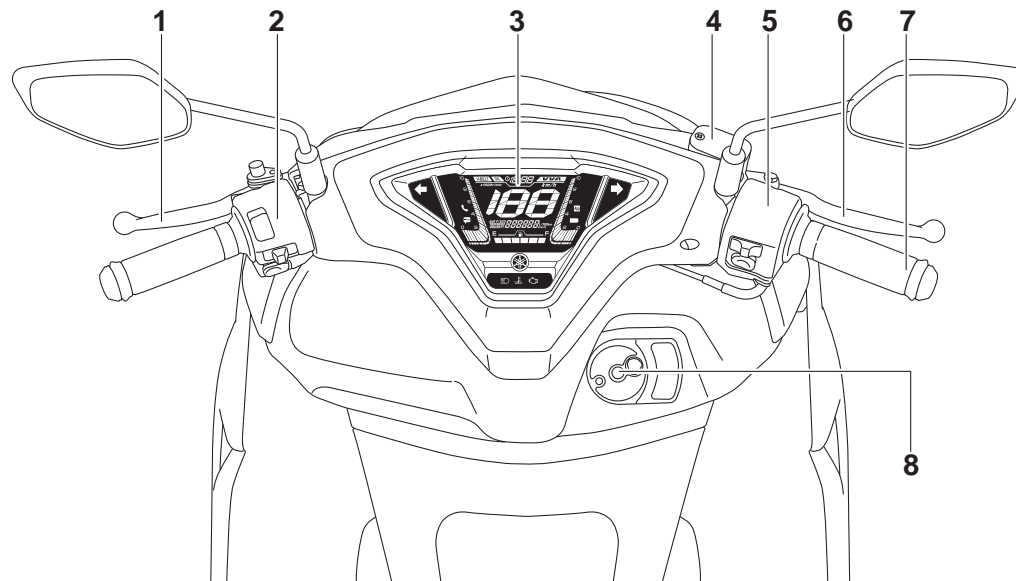


1. Rear brake lever (page 7-13)
2. Left handlebar switches (page 7-11)
3. Multi-function meter unit (page 7-5)
4. Front brake fluid reservoir (page 10-22)
5. Right handlebar switches (page 7-11)
6. Front brake lever (page 7-13)
7. Throttle grip (page 10-17)

8. Main switch (page 7-1/4-7)

Description

GDR155-A

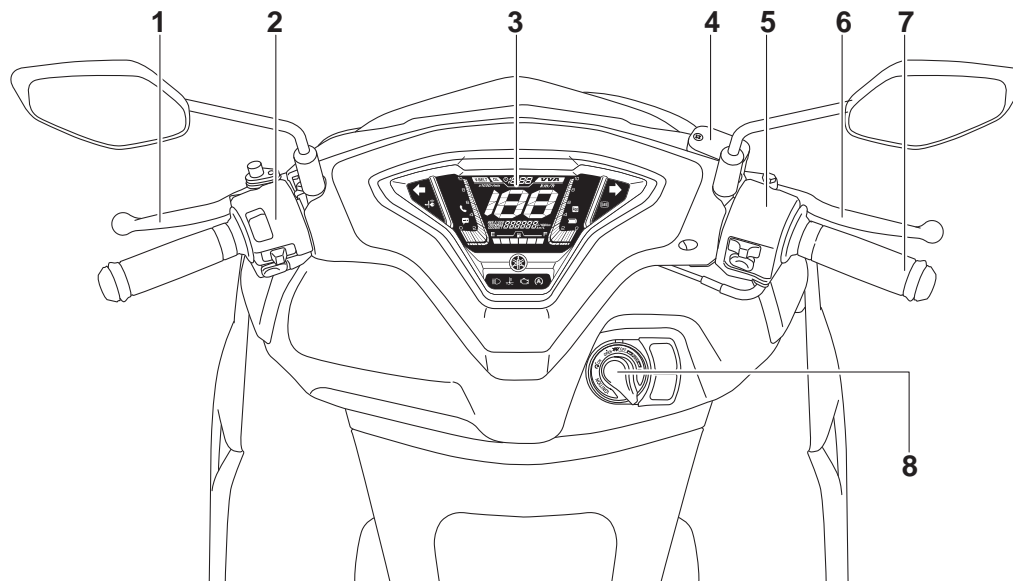


1. Rear brake lever (page 7-13)
2. Left handlebar switches (page 7-11)
3. Multi-function meter unit (page 7-5)
4. Front brake fluid reservoir (page 10-22)
5. Right handlebar switches (page 7-11)
6. Front brake lever (page 7-13)
7. Throttle grip (page 10-17)
8. Main switch (page 7-1/4-7)


EAU76444

Smart key system

The smart key system enables you to operate the vehicle without using a mechanical key. In addition, there is an answer-back function to help you locate the vehicle in a parking lot. (See page 4-5.)

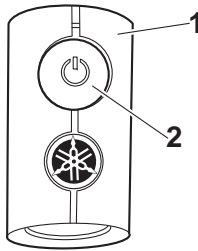

1. Smart key
2. Smart key button

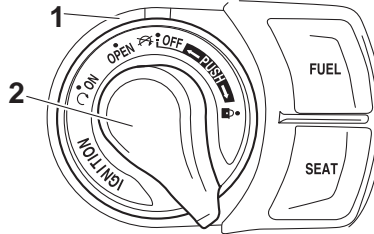


1. Main switch
2. Main switch knob

EWA14704

WARNING

- Keep implanted pacemakers or cardiac defibrillators, as well as other electric medical devices away from the vehicle mounted antenna (see illustration).
- Radio waves transmitted by the antenna may affect the operation of such devices when close by.
- If you have an electric medical device, consult a doctor or the device manufacturer before using this vehicle.

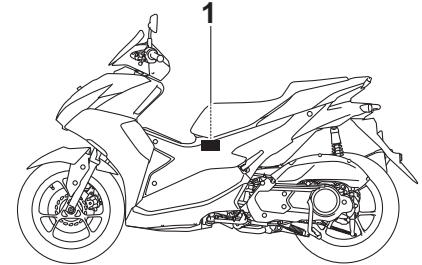

1. Vehicle mounted antenna

ECA24080

NOTICE

The smart key system uses weak radio waves. The smart key system may not work in the following situations.

- The smart key is placed in a location exposed to strong radio waves or other electromagnetic noise
- There are facilities nearby that are emitting strong radio waves (TV or radio towers, power plants, broadcasting stations, airports, etc.)

Smart key system (GDR155-A)

4

- You are carrying or using communication equipment such as radios or mobile phones in close proximity of the smart key
- The smart key is in contact with or covered by a metallic object
- Other vehicles equipped with a smart key system are nearby

In such situations, move the smart key to another location and perform the operation again. If it still does not work, operate the vehicle in emergency mode. (See page 10-37.)



TIP

To preserve vehicle battery power, the smart key system turns off approximately 9 days after the vehicle was last used (the answer-back function is disabled). In this situation, simply push the main switch knob to turn the smart key system back on.

Operating range of the smart key system

EAU76453

The approximate operating range of the smart key system is shown below.

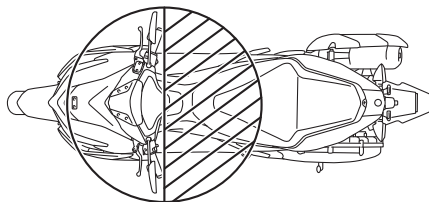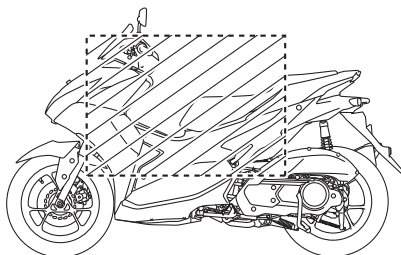

If the smart key is turned off, the vehicle will not recognize the smart key even if it is within operating range. If the smart key battery is discharged, the


smart key system may not work or its operating range may become very short.

TIP


- Do not place the smart key in a storage compartment.
- Always carry the smart key with you.
- Turn the smart key off when leaving the vehicle.

Handling of the smart key and mechanical keys

EAUN2460

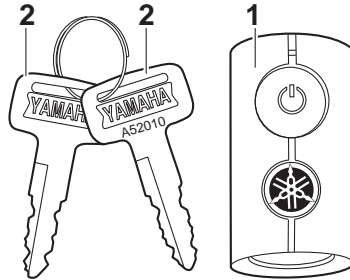

- 1. Smart key
- 2. Mechanical key

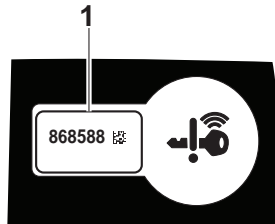

- 1. Identification number card

EWA17952

! WARNING

- The smart key should be carried with you. Do not store it on the vehicle.
- When the smart key is within operating range, exercise due care because other people not carrying the smart key can start the engine and operate the vehicle.

Included with the vehicle is one smart key, two mechanical keys, and one identification number card. Keep one mechanical key and the identification number card in a safe place separate from the vehicle.

If the vehicle battery is discharged, the mechanical key can be used to open the seat to charge or replace the battery. Therefore it is recommended that you carry one mechanical key together with the smart key.

If the smart key and the smart key system identification number are both lost or damaged, the entire smart key system will need to be replaced. To prevent this, it is recommended that you

write down the identification number in case the identification number card is lost.

ECA21573

NOTICE

The smart key has precision electronic components. Observe the following precautions to prevent possible malfunction or damage.

- Do not place or store the smart key in a storage compartment. The smart key may be damaged from road vibrations or excessive heat.
- Do not drop, bend, or subject the smart key to strong impacts.
- Do not submerge the smart key in water or other liquids.
- Do not place heavy items or excessive stress on the smart key.
- Do not leave the smart key in a place exposed to direct sunlight, high temperature or high humidity.
- Do not grind or attempt to modify the smart key.

Smart key system (GDR155-A)

4

- **Keep the smart key away from strong magnetic fields and magnetic objects such as key holders, TVs, and computers.**
- **Keep the smart key away from electric medical equipment.**
- **Do not allow oils, polishing agents, fuel, or any strong chemicals to come in contact with the smart key. The smart key body may become discolored or cracked.**

TIP


- The smart key battery life is approximately two years, but this may vary according to operating conditions.
- Replace the smart key battery when the smart key system indicator light flashes for 20 seconds when the vehicle is turned on, or when the smart key indicator light does not come on when the smart key button is pushed. (See page 4-6.) After changing the smart key battery, if the smart key system

still does not operate, check the vehicle battery and then have a Yamaha dealer check the vehicle.

- If the smart key continually receives radio waves, the smart key battery will discharge quickly. (For example, when placed in the vicinity of electrical products such as televisions, radios, or computers.)
- You can register up to six smart keys for the same vehicle. See a Yamaha dealer regarding spare smart keys.
- If a smart key is lost, contact a Yamaha dealer immediately to prevent the vehicle from being stolen, etc.

Smart key

EAU76473

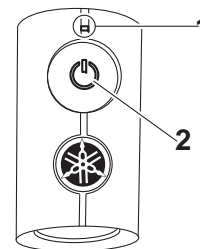

1. Smart key indicator light
2. Smart key button

WARNING

EWA17952

- **The smart key should be carried with you. Do not store it on the vehicle.**
- **When the smart key is within operating range, exercise due care because other people not carrying the smart key can start the engine and operate the vehicle.**

To turn the smart key on or off

Push the smart key button for approximately 1 second to turn the smart key on or off. When the smart key is turned off, the vehicle cannot be operated even if the smart key is within operating range. To operate the vehicle, turn the smart key on and bring it within operating range.

To check whether the smart key is turned on or off

Push the smart key button to confirm the current operating status of the smart key.

If the smart key indicator light:


- Short flash (0.1 seconds): The smart key is turned on.
- Long flash (0.5 seconds): The smart key is turned off.

Remote answer-back function

Push the smart key button to operate the answer-back function remotely. The beeper will sound twice and all of the turn signal lights will flash twice. This feature is convenient for locating your vehicle in a parking lot and other areas.

Operating range of the answer-back function

The approximate operating range of the answer-back function is as shown.

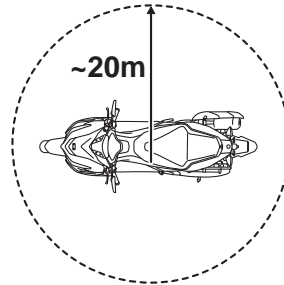

As the smart key system uses weak radio waves, the operating range may be affected by the surrounding environment.

To turn the answer-back beeper on or off

The beeper, which sounds when the answer-back function is operated, can be turned on or off according to the following procedure.

1. Turn the smart key on and bring it within operating range.

2. Turn the main switch to "OFF", and then push the main switch knob once.
3. Within 9 seconds of pushing the knob, push and hold the knob again for 5 seconds.
4. When the beeper sounds, the setting is complete.

If the beeper:

- Sounds twice: The beeper is turned off.
- Sounds once: The beeper is turned on.

Smart key system (GDR155-A)

EAUN2710

Replacing the smart key battery

Replace the battery in the following situations.

- The smart key system indicator light flashes for about 20 seconds when the power of the vehicle is turned on.
- The answer-back function does not operate when the smart key button is pushed.



1. Smart key system indicator light “

EWA14724

WARNING

- The battery and other removable parts may cause injury if swallowed. Keep the battery and other removable parts away from children.
- Do not expose the battery to direct sunlight or other heat sources.

ECA15784


NOTICE

- Use a cloth when opening the smart key case with a screwdriver. Direct contact with hard objects may damage or scratch the smart key.
- Take precautions to prevent the waterproof seal from being damaged or contaminated by dirt.
- Do not touch the internal circuits and terminals. This may cause malfunctions.
- Do not apply excessive force to the smart key when replacing the battery.


- Make sure the battery is installed correctly. Confirm the direction of the positive/“+” side of the battery.

To replace the smart key battery

1. Open the smart key case as shown.

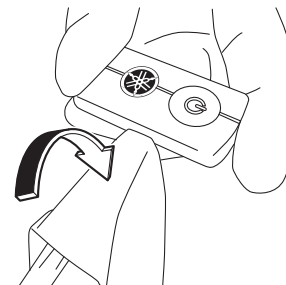

2. Remove the battery.

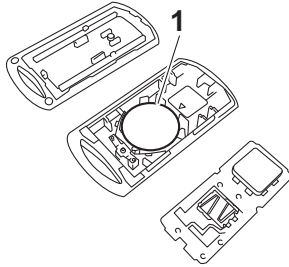


1. Battery

TIP

Dispose of the removed battery in accordance with local regulations.

3. Install a new battery as shown.
Note the polarity of the battery.


Specified battery:
CR2032

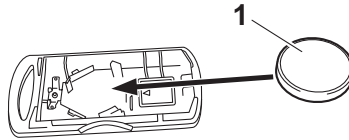

1. Battery


4. Gently snap the smart key case closed.

Main switch

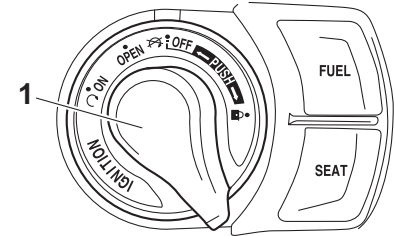

1. Main switch knob



1. Smart key system indicator light “”


The main switch is used to turn the vehicle power on and off, lock and unlock the steering, and open the seat. After pushing the main switch knob (and confirmation with the smart key has

Smart key system (GDR155-A)

taken place), the main switch can be turned while the smart key system indicator light is on (approximately 4 seconds).

WARNING

EWA18720

Never turn the main switch to “OFF”, “”, or “OPEN” while the vehicle is moving. Otherwise the electrical systems will be switched off, which may result in loss of control or an accident.


TIP

Do not push the main switch knob repeatedly or turn the main switch back and forth excessively (beyond normal use). To protect the main switch from damage, the smart key system will temporarily disable, and the smart key system indicator light will flash. If this occurs, wait until the indicator light stops flashing, and then operate the main switch.

The main switch positions are described below.

ON (on)

EAU76500

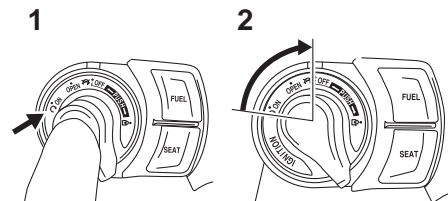

1. Push.
2. Turn.

All electrical circuits are supplied with the power, and the engine can be started.

To turn the vehicle power on

1. Turn the smart key on and bring it within operating range.
2. Push the main switch knob and the smart key indicator light will come on for approximately 4 seconds.


3. While the smart key system indicator light is on, turn the main switch to “ON”. All of the turn signal lights flash twice and the vehicle power turns on.

TIP

- If the vehicle battery voltage is low, the turn signal lights will not flash.
- See “Emergency mode” on page 10-37 for information on turning the vehicle power on without the smart key.

OFF (off)

EAU76510

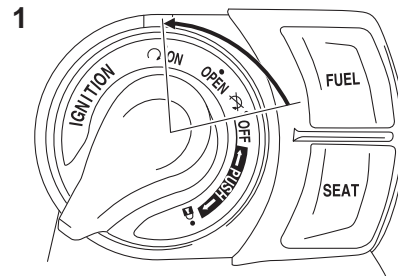

1. Turn.

All electrical systems are off.

To turn the vehicle power off

1. With the smart key turned on and within operating range, turn the main switch to “OFF”.
2. The turn signal lights flash once and the vehicle power turns off.

TIP

When the main switch is turned to “OFF” but the smart key cannot be confirmed (the smart key is either outside operation range or has been turned off), the beeper will sound for 3 seconds and the smart key system indicator light will flash for 30 seconds.


- During this 30 seconds, the main switch can be freely operated.
- After 30 seconds, the vehicle power will turn off automatically.
- To turn the vehicle power off immediately, push the main switch knob four times within 2 seconds.

OPEN (open)

The fuel tank cap lid and the seat can be opened.


1. With the smart key on and within operating range, push the main switch knob.

2. While the smart key system indicator light is on, turn the main switch to “OPEN”.

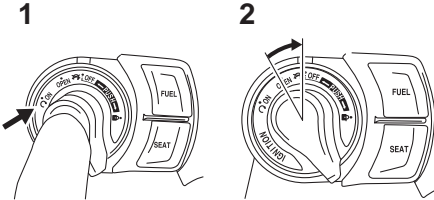

1. Push.
2. Turn.

To open the fuel tank cap lid

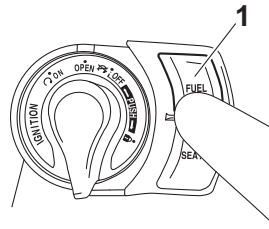

1. “FUEL” button


Push the “FUEL” button to open the fuel tank cap lid.

After refueling, push the fuel tank cap cap lid until it is closed.

TIP

See page 7-15 for fuel tank cap removing and installing procedures.

To open the seat

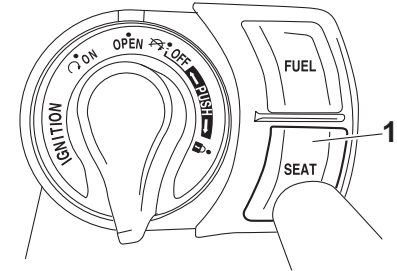

1. “SEAT” button

Push the “SEAT” button, and then lift the rear of the seat.

To close the seat, push down on the rear to lock it in position.

TIP

- Make sure that the seat is securely closed before starting off.

EAU76533

Smart key system (GDR155-A)

- The seat can also be opened with the mechanical key. (See page 7-19.)

Open position reminder

To prevent you from accidentally leaving the vehicle unlocked by walking away with the main switch still in the "OPEN" position, the smart key system beeper will sound under the following conditions.

- When the main switch has been in the open position for 3 minutes
- If the smart key is turned off while the main switch is in the open position
- If you walk out of range of the smart key system with the main switch in the open position


If the beeper sounds after 3 minutes, turn the main switch to "OFF" or "🔒". If the beeper sounds because the smart key was turned off or moved out of range, turn the smart key on and walk back into range.

TIP

- The beeper will turn off after 1 minute.

"🔒" (lock)

EAU76521

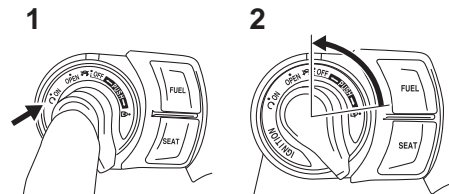

1. Push.
2. Turn.

The steering is locked and all electrical systems are off.


To lock the steering

1. Turn the handlebar all the way to the left.
2. With the smart key turned on and within operating range, push the main switch knob.
3. While the smart key system indicator light is on, push and turn the main switch to "🔒".

TIP

If the steering will not lock, try turning the handlebar back to the right slightly.

To unlock the steering

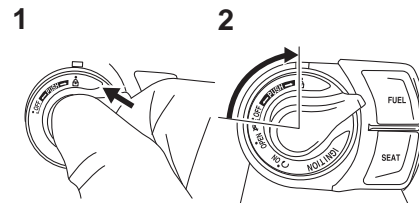


1. Push.
2. Turn.

1. With the smart key turned on and within operating range, push the main switch knob.
2. While the smart key system indicator light is on, push and turn the main switch to the desired position.

Stop and Start System

EAU76824

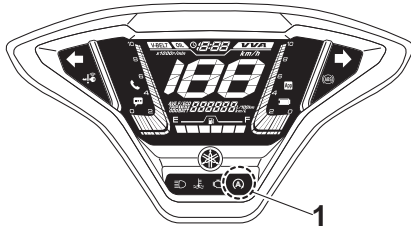

1. Stop and Start System indicator light “(A)”

The Stop and Start System is a system that stops the engine automatically when the vehicle is stopped while the Stop and Start System indicator light is on to prevent noise, control exhaust emissions, and reduce fuel consumption.

When the rider turns the throttle grip slightly, the engine restarts automatically and the vehicle starts off.

NOTICE

ECA23961

When parking the vehicle or leaving the vehicle unattended, be sure to turn the main switch off. If the Stop and Start System is left turned on,

the battery could become discharged and it may not be possible to restart the engine due to insufficient battery voltage.

TIP

- Although the engine normally stops at the same time the vehicle is stopped, it may take a while until the engine stops when operating the vehicle under 10 km/h such as in heavy traffic.
- If you think the battery voltage has decreased because the engine cannot be started using the starter switch or for some other reason, do not turn on the Stop and Start System.
- Have a Yamaha dealer check the battery at the intervals specified in the periodic maintenance chart.


Stop and Start System operation

EAU76671


Activating the Stop and Start System

EAU76686

1. Turn the main switch on.

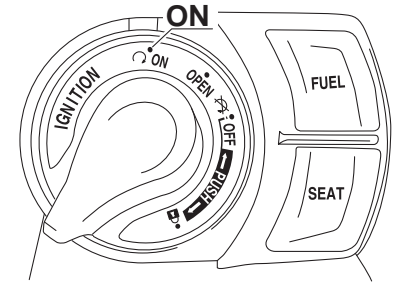


2. Set the Stop and Start System switch to “(A)”.

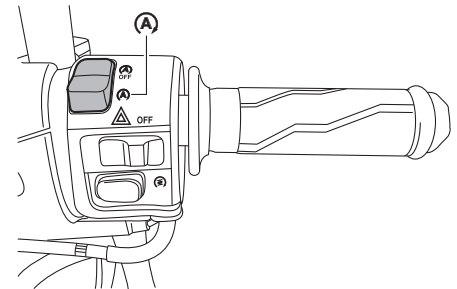

Stop and Start System (GDR155-A)


3. When the vehicle confirms that the following conditions are met, the Stop and Start System activates and the Stop and Start System indicator light comes on.

- The Stop and Start System switch is set to “(A)”.
- After the engine was warmed up, the engine was left idling for a certain period of time.
- The vehicle has traveled at a speed of 10 km/h or higher.

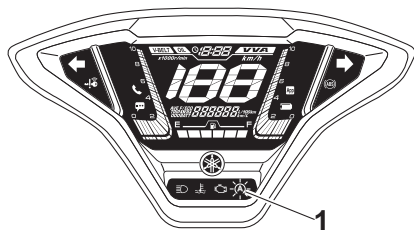

1. On

4. To turn off the Stop and Start System, set the Stop and Start System switch to “(A)”.

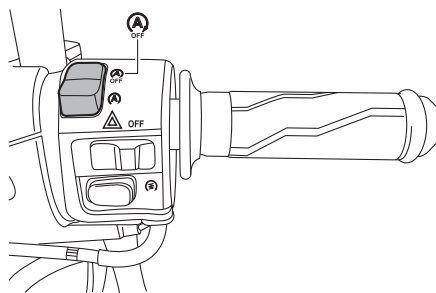

TIP


- To preserve battery power, the Stop and Start System may not activate.
- If the Stop and Start System does not activate repeatedly, have a Yamaha dealer check the battery.

EAU76831

Stop the engine

After the “(A)” indicator light on the multi-function meter comes on, the engine stops automatically when the engine is left idling when the vehicle is stopped and the throttle grip is in the fully closed position.

At this time, the “(A)” indicator light on the multi-function meter starts flashing to indicate that the engine is currently stopped by the Stop and Start System.

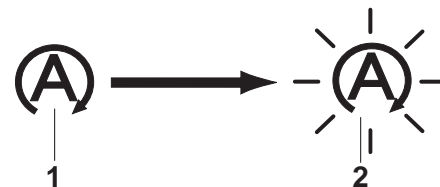


1. On
2. Flashing

Restart the engine

If you turn the throttle grip while the Stop and Start System indicator light is flashing and the engine is stopped, the engine restarts automatically and the “(A)” indicator light stops flashing.

EAU76703

Stop and Start System (GDR155-A)

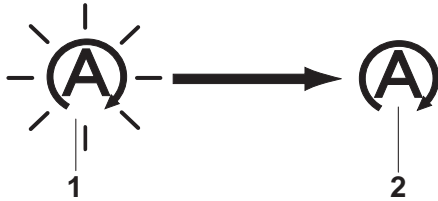

1. Flashing
2. Off

! WARNING

Do not turn the throttle grip quickly when the Stop and Start System is activated and the engine is stopped. Otherwise, the vehicle could start moving unexpectedly after the engine restarts.

EWA18730



TIP

- When the sidestand is lowered, the Stop and Start System is deactivated.
- If the Stop and Start System does not operate correctly, have a Yamaha dealer check the vehicle.

EAU76711

Precautions when using the Stop and Start System


In order to prevent accidents due to improper operation, carefully read and observe the following precautions.

EWA18741

! WARNING

When walking while pushing the vehicle, be sure to turn the main switch off. If the vehicle is pushed while the

Stop and Start System is left turned on, the engine could start and the vehicle could start moving if the throttle grip is turned accidentally.

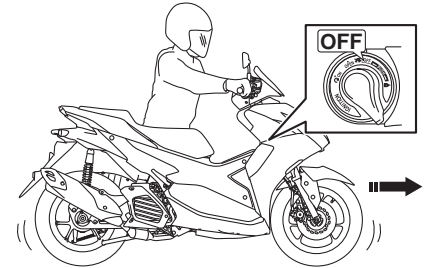


EWA18751

! WARNING

When placing the vehicle on the centerstand, be sure to turn the main switch off. If the vehicle is placed on the centerstand while the Stop and Start System is left turned on, the engine could start and the vehicle could start moving if the throttle grip is turned accidentally.

Stop and Start System (GDR155-A)


5

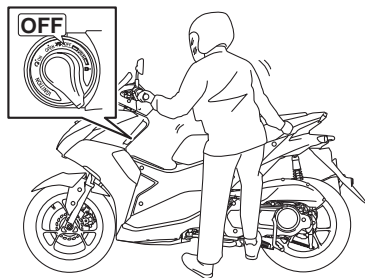

EWA18771

WARNING


- When leaving the vehicle unattended, be sure to turn the main switch off.
- Do not leave the Stop and Start System turned on when parking the vehicle. Otherwise, the engine could start and the vehicle could start moving if the throttle grip is turned accidentally.

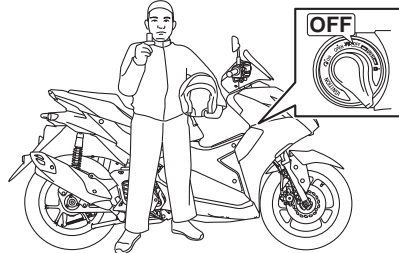

EWA18781

WARNING

Before performing maintenance, be sure to turn the main switch off. If maintenance is performed while the Stop and Start System is turned on, the engine could start and the vehicle could start moving if the throttle grip is turned.

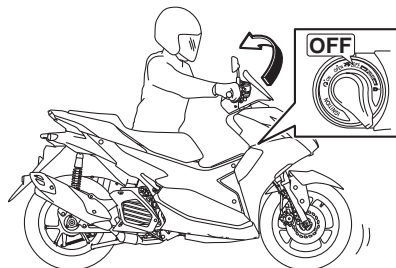

CCU (Communication Control Unit)

EAUN2762

This model is equipped with a CCU that allows your vehicle and smartphone to connect using Bluetooth wireless technology and the Yamaha Motorcycle Connect smartphone app. With this connection, notifications from SNS (social network service) apps, incoming phone calls and missed calls are signaled to you, and the battery level of your smartphone is displayed. The Yamaha Motorcycle Connect app also provides other information such as your last parking location, etc.

EWAN0070

WARNING

- Always stop the vehicle before operating your smartphone.
- Never take your hands off the handlebars while riding.
- Always concentrate on riding by keeping your eyes and mind on the road.

ECAN0150

NOTICE

The Bluetooth connection may not work in the following situations.

- In a location exposed to strong radio waves or other electromagnetic noise.
- At facilities nearby that are emitting strong radio waves (TV or radio towers, power plants, broadcasting stations, airports, etc.).

Pairing the CCU and your smartphone


1. Scan the QR code below and download the Yamaha Motorcycle Connect app.



TIP

Yamaha Motorcycle Connect may not work on all smartphone models and OS (operating system) versions.


2. Open the seat. (See page 7-17.)
3. Remove the battery cover.

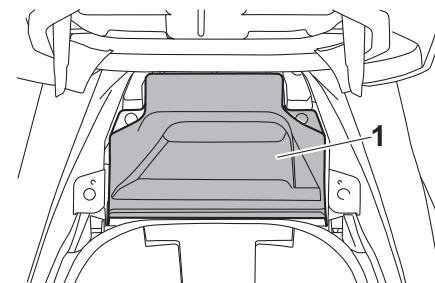

1. Battery cover

4. Pull out the CCU and scan its QR code with your smartphone.


Special features

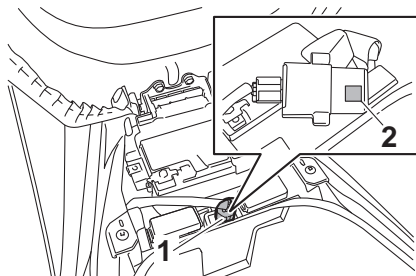

1. CCU (Communication Control Unit)
2. CCU QR Code

6

5. When pairing is complete, the Yamaha Motorcycle Connect icon and smartphone battery level meter will come on.

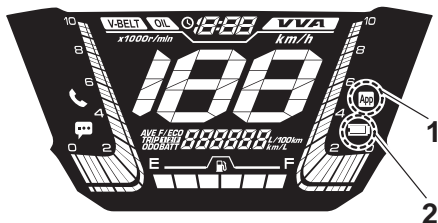

1. Yamaha Motorcycle Connect icon
2. Smartphone battery level meter

TIP


- Once paired, the smartphone is registered in the CCU. The next time the vehicle is turned on and the Yamaha Motorcycle Connect app is active, the connection will be automatically executed.
- Only one smartphone can be connected to the CCU at one time.

Scan the QR code below to see the certification number.



Main switch/steering lock

(GDR155)

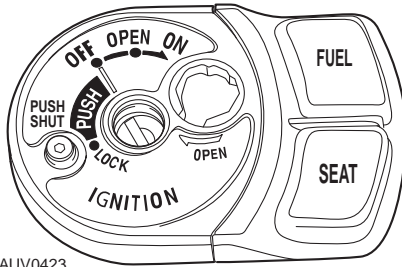

ZAUV0423

The main switch/steering lock controls the ignition and lighting systems, and is used to lock the steering. The various main switch positions are described below.

TIP

The main switch/steering lock is equipped with a keyhole shutter. (See page 7-2 for keyhole shutter opening and closing procedures.)

ON

All electrical circuits are supplied with power and the vehicle lights are turned on. The engine can be started. The key cannot be removed.

EAU85040

EAUN0264

TIP

- To prevent battery discharge, do not leave the key in the on position without the engine running.
- The headlight comes on automatically when the engine is started.

OFF

All electrical systems are off. The key can be removed.

EAU10662

WARNING

Never turn the key to “OFF” or “LOCK” while the vehicle is moving. Otherwise the electrical systems will be switched off, which may result in loss of control or an accident.

EWA10062


LOCK

The steering is locked and all electrical systems are off. The key can be removed.

EAU1068B


To lock the steering

1

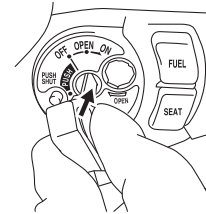

1. Push.

2

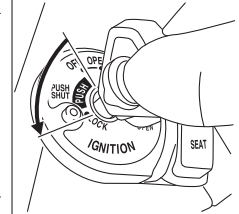

2. Turn.


1. Turn the handlebars all the way to the left.
2. With the key in the “OFF” position, push the key in and turn it to “LOCK”.
3. Remove the key.

TIP

If the steering will not lock, try turning the handlebars back to the right slightly.

Instrument and control functions

To unlock the steering

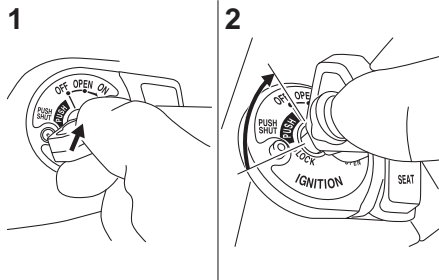


1. Push.
2. Turn.

From the “LOCK” position, push the key in and turn it to “OFF”.

Keyhole shutter

EAU0354

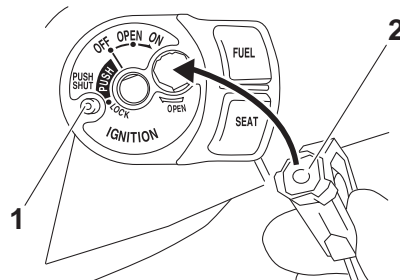

1. “PUSH SHUT” button
2. Shutter key

To open the keyhole shutter

Insert the shutter key into the keyhole shutter receptacle as shown, and then turn the key to the right to open the keyhole shutter.


To close the keyhole shutter

Press the “PUSH SHUT” button to close the keyhole shutter.

Indicator lights and warning lights


EAU77123

(GDR155-A)

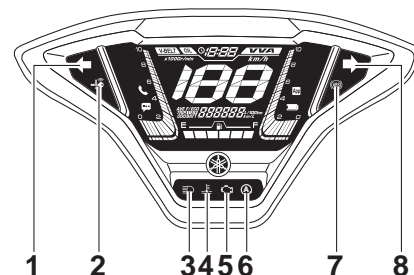

1. Left turn signal indicator light “↶”
2. Smart key system indicator light “⚡”
3. High beam indicator light “≡”
4. Coolant temperature warning light “⚡”
5. Engine trouble warning light “⚡”
6. Stop and Start System indicator light “(A)”
7. Anti-lock Brake System (ABS) warning light “(ABS)”
8. Right turn signal indicator light “↷”

(GDR155)

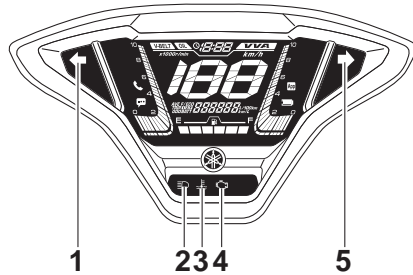

1. Left turn signal indicator light “↵”
2. High beam indicator light “≡○”
3. Coolant temperature warning light “⤵”
4. Engine trouble warning light “⚠”
5. Right turn signal indicator light “↶”

Turn signal indicator lights “↵” and “↶”

EAU11032

Each indicator light will flash when its corresponding turn signal lights are flashing.

High beam indicator light “≡○”

EAU11081

This indicator light comes on when the high beam of the headlight is switched on.

Coolant temperature warning light “⤵”

EAU11449

This warning light comes on when the engine is overheating. If this occurs, stop the engine immediately and allow the engine to cool. (See page 10-36.)

For vehicles with a radiator fan, the radiator fan(s) automatically switch on or off according to the coolant temperature.

TIP

When the vehicle is turned on, the light will come on for a few seconds, and then go off. If the light does not come on, or if the light remains on, have a Yamaha dealer check the vehicle.

NOTICE

ECA10022

Do not continue to operate the engine if it is overheating.

Engine trouble warning light “⚠”

EAU77561

This warning light comes on if a problem is detected in the engine or other vehicle control system. If this occurs, have a Yamaha dealer check the on-board diagnostic system.

TIP

When the vehicle is turned on, this light should come on for a few seconds and then go off. Otherwise, have a Yamaha dealer check vehicle.

EAU85161

ABS warning light “(Ⓜ)”

This warning light comes on when the vehicle is first turned on, and goes off after starting riding. If the warning light comes on while riding, the anti-lock brake system may not work correctly.

EWA16043

⚠ WARNING

If the ABS warning light does not turn off after reaching 10 km/h (6 mi/h), or if the warning light comes on while riding:

- Use extra caution to avoid possible wheel lock during emergency braking.
- Have a Yamaha dealer check the vehicle as soon as possible.

Instrument and control functions

TIP

The ABS warning light may come on while revving the engine with the vehicle on its centerstand, but this does not indicate a malfunction.

Smart key system indicator light “” (for GDR155-A)

EAU78600


This indicator light communicates the status of the smart key system. When the smart key system is operating normally, this indicator light will be off. If there is an error in the smart key system, the indicator light will flash. The indicator light will also flash when communication between the vehicle and smart key takes place and when certain smart key system operations are carried out.

Stop and Start System indicator light “” (for GDR155-A)

EAU76382

This indicator light comes on when the Stop and Start System activates. The indicator light will flash when the engine is automatically stopped by the Stop and Start System.

TIP

Even if the Stop and Start Switch is set to “”, this indicator light may not come on. (See page 5-1.)

Incoming call indicator light “”

EAUN2781

This indicator light flashes when there is an incoming call to the connected smartphone. If you do not answer the call, the indicator light stays on until you turn the vehicle off.

TIP

This function works only when the smartphone is connected to the vehicle.

Notification indicator light “”

EAUN2791

This indicator light flashes for 10 seconds when the connected smartphone receives an SNS, E-mail or other notification. After that, the indicator light stays on until you turn the vehicle off.


TIP

- This function works only when the smartphone is connected to the vehicle.

- Notification setting is needed for each application at the connected smartphone in advance.

Multi-function meter unit

EAUJ0980

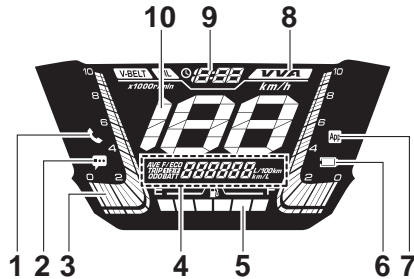

1. Incoming call indicator light “☎”
2. Notification indicator light “💬”
3. Tachometer
4. Multi-function display
5. Fuel meter
6. Smartphone battery level meter
7. Yamaha Motorcycle Connect icon
8. VVA (variable valve actuation) indicator
9. Clock
10. Speedometer




WARNING

Be sure to stop the vehicle before making any setting changes to the multi-function meter unit. Changing

EWA12423

settings while riding can distract the operator and increase the risk of an accident.

The “MENU” switch is located on the left side of handlebar. This switch allows you to control or change the settings of multi-function meter unit.

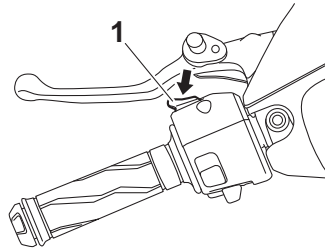

1. “MENU” switch

TIP

Be sure to turn the main switch on before using the “MENU” switch.

Yamaha Motorcycle Connect icon

EAUN2860

This icon comes on when CCU and smartphone is connected via Yamaha Motorcycle Connect.

TIP

Even if the smartphone is not connected, when the vehicle is turned on, this icon should come on for a few seconds. Otherwise have a Yamaha dealer check the CCU and the electrical circuit.

EAUN2871

Smartphone battery level meter

This meter indicates the current battery level of the connected smartphone. The display segment of the meter disappears from full to blank as the battery level decreases. When approximately 10% or less of the battery remains, the last segment start flashing.

TIP

Even if the smartphone is not connected, when the vehicle is turned on, this icon should come on for a few seconds. Otherwise have a Yamaha dealer check the CCU and the electrical circuit.

Instrument and control functions

Switching the display units

The display units can be switched between “km/L” and “L/100km”.


To switch the display units

1. Turn the vehicle off.
2. While pushing the “MENU” switch, turn the vehicle on.
3. Continue to push the “MENU” switch until the display unit setting screen comes on (approximately 5 seconds).
4. Push the “MENU” switch once to switch the display units.
5. Push the “MENU” switch for 1 second to confirm the setting.

EAUN3000

Speedometer

EAU86831

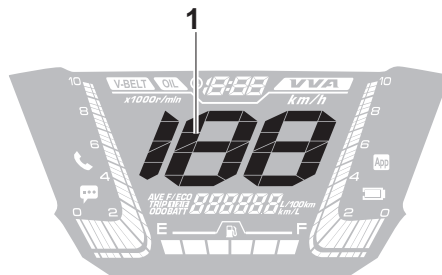


1. Speedometer

The speedometer shows the vehicle's traveling speed.

Tachometer

EAU87190

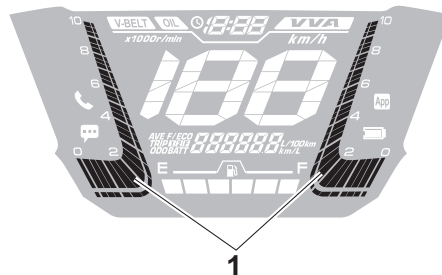


1. Tachometer

The tachometer allows the rider to monitor the engine speed and keep it within the ideal power range.

Fuel meter

EAU86841

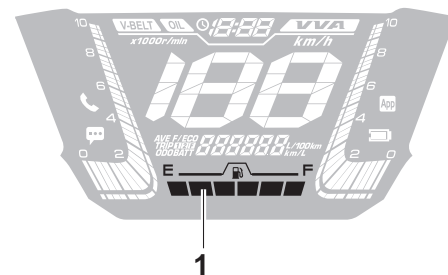

1. Fuel meter

The fuel meter indicates the amount of fuel in the fuel tank. The display segments of the fuel meter disappear from “F” (full) towards “E” (empty) as the fuel level decreases. When approximately 1.1 L (0.29 US gal, 0.24 Imp.gal) of fuel remains, the last segment starts flashing. Refuel as soon as possible.


Instrument and control functions

TIP

If a problem is detected in the electrical circuit, the fuel level segments will flash repeatedly. If this occurs, have a Yamaha dealer check the vehicle.

Clock

EAU86851

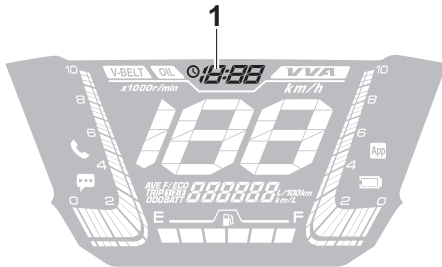

1. Clock

The clock uses a 12-hour time system.


To set the clock

1. Push the “MENU” switch until the hour digits start flashing.
2. Use the “MENU” switch to set the hours.
3. Push the “MENU” switch until the minute digits start flashing.

4. Use the “MENU” switch to set the minutes.
5. Push the “MENU” switch until the minute digits stop flashing. The setting is confirmed.

VVA indicator

EAU86870

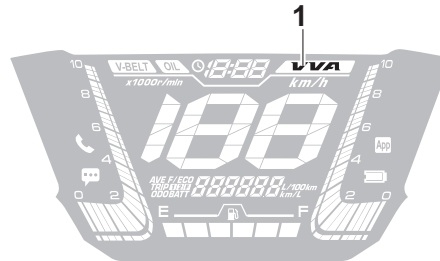

1. VVA (variable valve actuation) indicator

This model is equipped with variable valve actuation (VVA) for good fuel economy and acceleration in both the low-speed and high-speed ranges. The VVA indicator comes on when the variable valve actuation system has switched to the high-speed range.

To turn the VVA indicator on or off

1. Turn the vehicle off.

2. While pushing the “MENU” switch, turn the vehicle on.
3. Continue pushing the “MENU” switch. The display unit setting screen will come on (after 5 seconds), and after that (an additional 10 seconds) all segments other than the VVA indicator will start flashing. Now release the “MENU” switch.
4. Push the “MENU” switch once to change the on or off setting.
5. Push the “MENU” switch for 1 second to confirm the setting.


TIP

Turning the VVA indicator off does not turn off the variable valve actuation system.

Instrument and control functions

Multi-function display

EAU1011

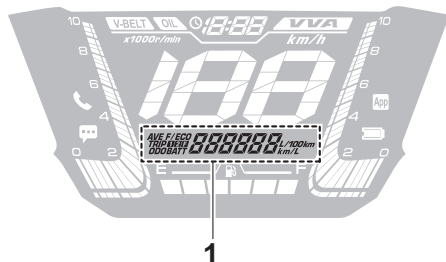

1. Multi-function display

The multi-function display is equipped with the following:

- an odometer (ODO)
- two tripmeters (TRIP 1 and TRIP 2)
- a fuel reserve tripmeter (TRIP F)
- an instantaneous fuel consumption display (F/ECO)
- an average fuel consumption display (AVE F/ECO)
- a battery voltage display (BATT)
- an oil change tripmeter (OIL TRIP)
- a V-belt replacement tripmeter (V-BELT TRIP)
- a backlight dimmer (bL_02)

Push the “MENU” switch to change the display in the following order:


ODO → TRIP 1 → TRIP 2 → TRIP F → F/ECO → AVE F/ECO → BATT → OIL TRIP → V-BELT TRIP → bL_2 → ODO

TIP

- The fuel reserve tripmeter appears only when you are low on fuel.
- The oil change tripmeter, V-belt replacement tripmeter, and backlight dimmer can not be displayed while the vehicle is moving.

Odometer

EAU86890

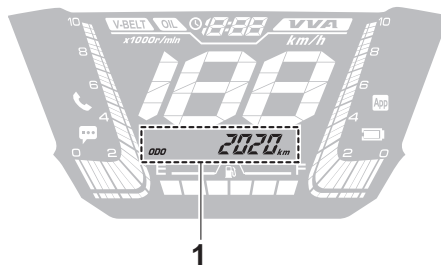

1. Odometer


The odometer shows the total distance traveled by the vehicle.

TIP

The odometer will lock at 999999 and cannot be reset.

Tripmeters

EAU86900

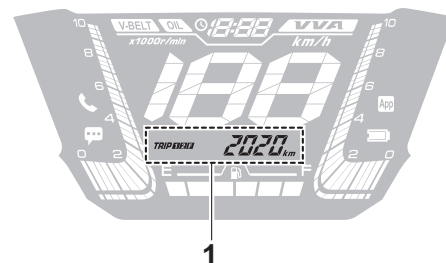

1. Tripmeter


The tripmeters show the distance traveled since they were last reset. To reset a tripmeter, set the display to the tripmeter you want to reset, and then push the “MENU” switch until it is reset.

TIP

The tripmeters will reset and continue counting after 9999.9 is reached.

Fuel reserve tripmeter

EAU86910

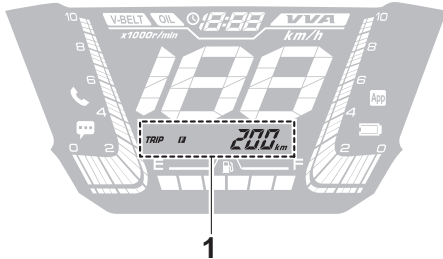

1. Fuel reserve tripmeter


If the last segment of the fuel meter starts flashing, the display automatically changes to the fuel reserve tripmeter "TRIP F" and starts counting the distance traveled from that point. To reset the fuel reserve tripmeter, push the "MENU" switch until it is reset.

TIP

If you do not reset the fuel reserve tripmeter manually, it will reset automatically and disappear from the display after refueling and traveling 5 km (3 mi).

Oil change tripmeter

EAU86920

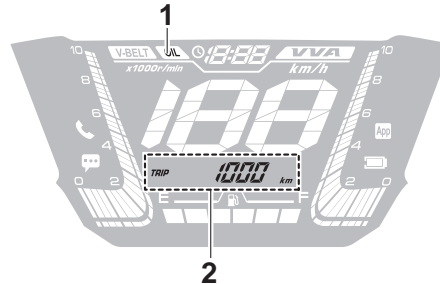

1. Oil change indicator "OIL"
2. Oil change tripmeter

This tripmeter shows the distance traveled since the last engine oil change. The oil change indicator "OIL" will flash at the initial 1000 km (600 mi), the next 3000 km (1800 mi), and then every 3000 km (1800 mi) thereafter.


To reset the oil change tripmeter and oil change indicator, select the oil change tripmeter, and then push the "MENU" switch until "OIL" and the tripmeter start flashing. While "OIL" and the tripmeter are flashing, push the "MENU" switch until the tripmeter is reset.

TIP

When the engine oil has been changed, the oil change tripmeter and the oil change indicator must be reset. Otherwise, the oil change indicator will not come on at the correct time.

EAU86930

V-belt replacement tripmeter

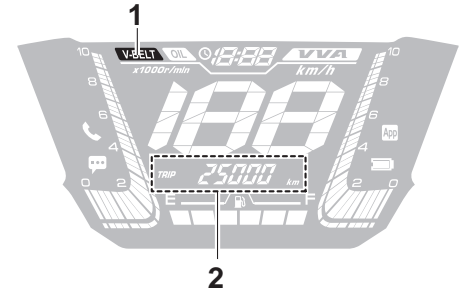

1. V-belt replacement indicator "V-BELT"
2. V-belt replacement tripmeter

This tripmeter shows the distance traveled since the V-belt was last replaced. The V-belt replacement indicator "V-BELT" will flash every 25000 km (15500 mi) to indicate that the V-belt should be replaced.

Instrument and control functions

To reset both the tripmeter and the indicator, select the V-belt replacement tripmeter, and then push the “MENU” switch until “V-BELT” and the tripmeter start flashing. While “V-BELT” and the tripmeter are flashing, push the “MENU” switch until the tripmeter is reset.

TIP

When the V-belt is replaced, the tripmeter and indicator must be reset. Otherwise, the V-belt replacement indicator will not come on at the correct time.

This display shows fuel consumption under current riding conditions. It can be set to either “km/L” or “L/100 km”.

- “km/L”: the distance that can be traveled on 1.0 L of fuel.
- “L/100 km”: the amount of fuel necessary to travel 100 km.

TIP

When traveling under 10 km/h, “_ _ _” is displayed.

- “km/L”: the average distance that can be traveled on 1.0 L of fuel.
- “L/100 km”: the average amount of fuel necessary to travel 100 km.


TIP

- To reset the display, push the “MENU” switch until it resets.
- After resetting, “_ _ _” is shown until the vehicle has traveled some distance.

7

Instantaneous fuel consumption display


EAUJ1030

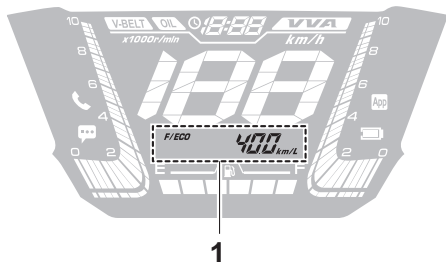

1. Instantaneous fuel consumption display

Average fuel consumption display

EAUJ1040

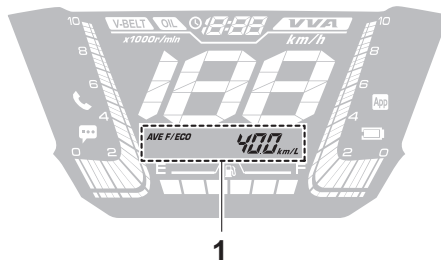


1. Average fuel consumption display

This display shows the average fuel consumption since it was last reset. The average fuel consumption display can be set to either “km/L” or “L/100 km”.

Battery voltage display

EAU86960

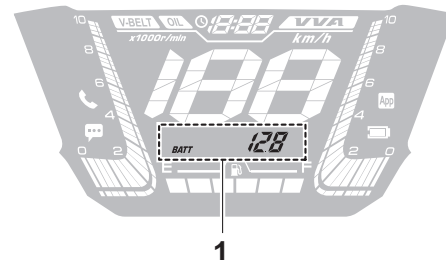

1. Battery voltage meter


This display shows the current charge state of the battery.

- Over 12.8 V = Full charge.
- Under 12.7 V = Charging is required.

TIP _____
If the battery voltage is less than 9.0 V, “_ _ _” is displayed.

Backlight dimmer

EAUJ1050

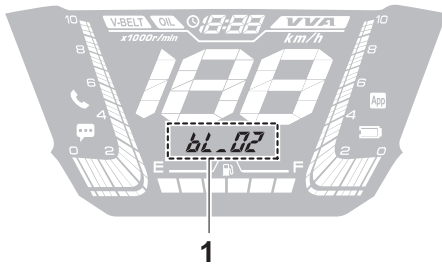

1. Backlight dimmer

This function allows you to dim or brighten the display.

To access the backlight dimmer function


1. Make sure the vehicle is completely stopped.
2. Use the “MENU” switch to cycle through the menu until the current backlight level (bL_01, bL_02, or bL_03) is displayed.

3. Push the “MENU” switch until the figures (bL_01, bL_02, or bL_03) flash.
4. Use the “MENU” switch to select the desired backlight level.
5. Push the “MENU” switch to confirm the chosen backlight level and the figure stops flashing.

Handlebar switches

EAU1234R


Left

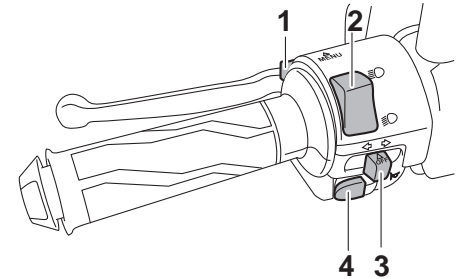

1. “MENU” switch
2. Dimmer switch “☰/☷”
3. Turn signal switch “↶/↷”
4. Horn switch “🔊”

Instrument and control functions

Right

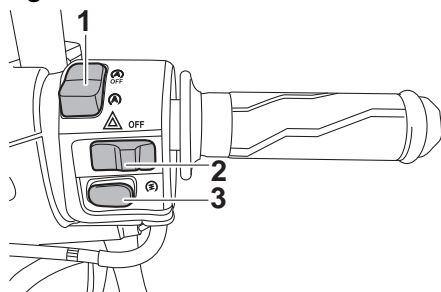

1. Stop and Start System switch “/” (for equipped models)
2. Hazard lights switch “/OFF”
3. Start switch “”

Dimmer switch “/”

EAU89570

Set this switch to “” for the high beam and to “” for the low beam.

TIP

When the switch is set to low beam, both upper headlights come on.
When the switch is set to high beam, both lower headlights also come on.

Turn signal switch “/”

EAU12461

To signal a right-hand turn, push this switch to “”. To signal a left-hand turn, push this switch to “”. When released, the switch returns to the center position. To cancel the turn signal lights, push the switch in after it has returned to the center position.

Horn switch “”

EAU12501

Press this switch to sound the horn.

Start switch “”

EAU12722

With the sidestand up, push this switch while applying the front or rear brake to crank the engine with the starter. See page 9-2 for starting instructions prior to starting the engine.

Hazard switch “”

EAU79500

With the main switch in the “ON” position, use this switch to turn on the hazard lights (simultaneous flashing of all turn signal lights).

The hazard lights are used in case of an emergency or to warn other drivers when your vehicle is stopped where it might be a traffic hazard.

ECA10062

NOTICE

Do not use the hazard lights for an extended length of time with the engine not running, otherwise the battery may discharge.

Menu switch “MENU”

EAU59011

This switch is used to perform selections in the setting mode display of the multi-function meter unit.
See Multi-function meter unit on page 7-5 for detailed information.


Stop and Start System switch “/” (for GDR155-A)

EAU76391

To turn on the Stop and Start System, set the switch to “”. To turn off the Stop and Start System, set this switch to “”.

Front brake lever

EAU12902

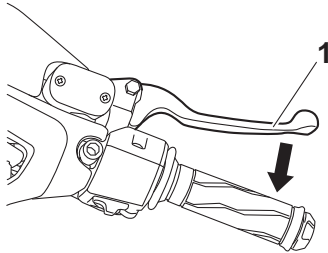


1. Front brake lever

The front brake lever is located on the right side of the handlebar. To apply the front brake, pull this lever toward the throttle grip.

Rear brake lever

EAU12952

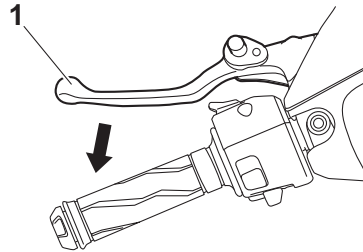


1. Rear brake lever

The rear brake lever is located on the left side of the handlebar. To apply the rear brake, pull this lever toward the handlebar grip.

Rear brake lever lock

EAUN0440

This vehicle is equipped with a rear brake lever lock.

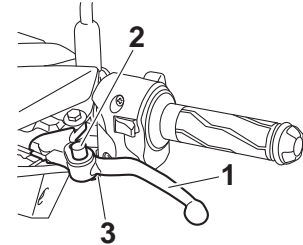

1. Rear brake lever
2. Lever lock pin
3. Lever lock pin stopper

To lock the brake lever

1. Pull the rear brake lever toward the handlebar grip.
2. Push the lever lock pin down until it latches with the lever lock pin stopper.

To unlock the brake lever

1. Pull the brake lever toward the handlebar grip.

Instrument and control functions

2. The lever lock pin should release from the lever lock pin stopper and unlock the rear brake lever.

TIP _____
Use the rear brake lever lock while seated.

EWA16051

WARNING

Never apply the rear brake lever lock while the vehicle is moving, otherwise loss of control or an accident may result. Make sure that the vehicle is stopped before applying the rear brake lever lock.

7

ABS (for ABS models)

EAU77821

This model's ABS (anti-lock brake system) acts on the front brake system. Operate the brakes as you normally would with a conventional brake system. If the ABS is activated, a pulsating sensation may be felt at the front brake lever. In this situation, continue to apply the brakes and let the ABS work; do not release and re-apply the brakes (i.e., pump the brakes) as this will reduce braking effectiveness.

EWA16051

WARNING

Always keep a sufficient distance from the vehicle ahead to match the riding speed even with ABS.

- The ABS performs best with long braking distances.
- On certain surfaces, such as rough or gravel roads, the braking distance may be longer with the ABS than without.

The ABS is monitored by an ECU, which will revert the system to conventional braking if a malfunction occurs.

TIP

- The ABS performs a self-diagnosis test each time the vehicle first starts off after the main switch is turned on and the vehicle has traveled at a speed of 10 km/h (6 mi/h) or higher. During this test, a clicking noise may be audible, and a vibration may be felt at the brake lever, but these do not indicate a malfunction.
- The ABS has a test mode which allows the owner to experience the pulsating sensation at the front brake lever. However, special tools are required so please consult your Yamaha dealer.

ECA20100

NOTICE


Be careful not to damage the wheel sensor or wheel sensor rotor; otherwise, improper performance of the ABS will result.

Instrument and control functions


EAUN2571

Fuel tank cap


To open the fuel tank cap lid, turn the main switch to “OPEN” position and push the “FUEL” button.

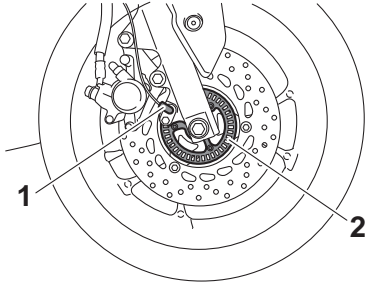

1. Front wheel sensor
2. Front wheel sensor rotor

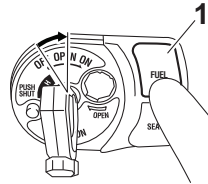


GDR155

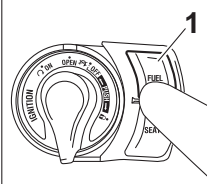

GDR155-A


1. “FUEL” button

To open the the fuel tank cap, turn it counterclockwise and pull it off.

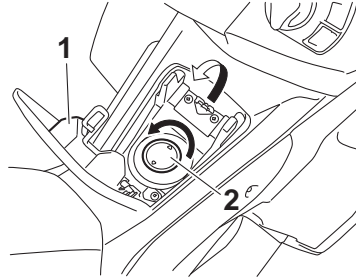

1. Fuel tank cap lid
2. Fuel tank cap

To install the fuel tank cap, turn it clockwise until the “△” mark is facing forward. Close the fuel tank cap lid.

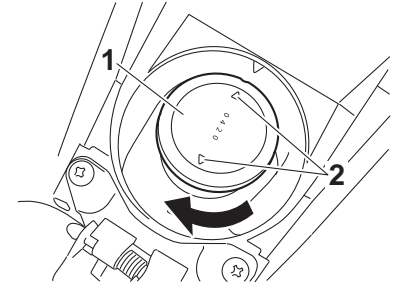

1. Fuel tank cap
2. “△” mark

WARNING

Make sure that the fuel tank cap is properly installed before riding. Leaking fuel is a fire hazard.

EWA10132

Instrument and control functions

Fuel

Make sure there is sufficient gasoline in the tank.


EAU13213

EWA10882

WARNING

Gasoline and gasoline vapors are extremely flammable. To avoid fires and explosions and to reduce the risk of injury when refueling, follow these instructions.

1. Before refueling, turn off the engine and be sure that no one is sitting on the vehicle. Never refuel while smoking, or while in the vicinity of sparks, open flames, or other sources of ignition such as the pilot lights of water heaters and clothes dryers.
2. Do not overfill the fuel tank. Stop filling when the fuel reaches the bottom of the filler tube. Because fuel expands when it heats up, heat from the engine or the sun can cause fuel to spill out of the fuel tank.

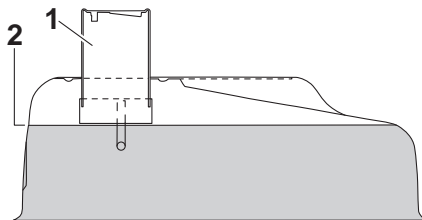

1. Fuel tank filler tube
2. Maximum fuel level

3. Wipe up any spilled fuel immediately. **NOTICE:** Immediately wipe off spilled fuel with a clean, dry, soft cloth, since fuel may deteriorate painted surfaces or plastic parts. [ECA10072]
4. Be sure to securely close the fuel tank cap.

EWA15152

WARNING

Gasoline is poisonous and can cause injury or death. Handle gasoline with care. Never siphon gasoline by mouth. If you should swallow some gasoline or inhale a lot of gasoline vapor, or get some gasoline in your eyes, see your doctor immedi-

ately. If gasoline spills on your skin, wash with soap and water. If gasoline spills on your clothing, change your clothes.

EAUN0750

Recommended fuel:

Unleaded gasoline only

Fuel tank capacity:

5.5 L (1.5 US gal, 1.2 Imp.gal)


ECA11401

NOTICE

Use only unleaded gasoline. The use of leaded gasoline will cause severe damage to internal engine parts, such as the valves and piston rings, as well as to the exhaust system.

Fuel tank overflow hose

EAU86150

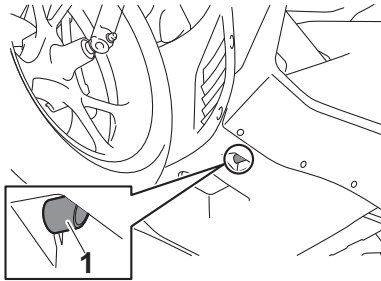

1. Fuel tank overflow hose

The overflow hose drains excess gasoline and directs it safely away from the vehicle.

Before operating the vehicle:

- Check the fuel tank overflow hose connection and routing.
- Check the fuel tank overflow hose for cracks or damage, and replace it if necessary.
- Make sure that the fuel tank overflow hose is not blocked, and clean it if necessary.

Catalytic converter

EAU13435

The exhaust system contains catalytic converter(s) to reduce harmful exhaust emissions.

EWA10863

⚠ WARNING

The exhaust system is hot after operation. To prevent a fire hazard or burns:

- Do not park the vehicle near possible fire hazards such as grass or other materials that easily burn.
- Park the vehicle in a place where pedestrians or children are not likely to touch the hot exhaust system.
- Make sure that the exhaust system has cooled down before doing any maintenance work.
- Do not allow the engine to idle more than a few minutes. Long idling can cause a build-up of heat.

Seat

EAU89400


To open the seat

Via the main switch

Turn the main switch to “OPEN”, and then push the “SEAT” button. (See page 4-9.)

With the mechanical key

1. Open the keyhole cover.
2. Insert the mechanical key into the seat lock, and then turn it clockwise.

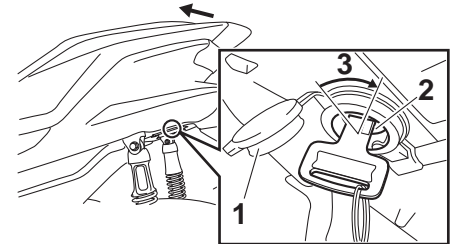

1. Keyhole cover
2. Seat lock
3. Unlock.

3. Lift the rear of the seat.

Instrument and control functions

ECA24020

NOTICE

Make sure that the keyhole cover is installed when the mechanical key is not being used.

To close the seat


Push the rear of the seat down to lock it in place.

TIP

Make sure that the seat is properly secured before riding.

EAU37482

Helmet holders

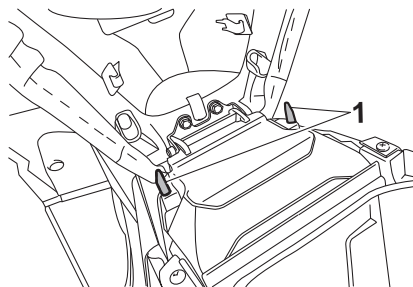

1. Helmet holder

The helmet holders are located under the seat.

To release a helmet from a helmet holder

Open the seat, remove the helmet from the helmet holder, and then close the seat.

To secure a helmet to a helmet holder


1. Open the seat. (See page 7-17.)
2. Attach a helmet to a helmet holder, and then securely close the seat. **WARNING! Never ride with a helmet attached to the helmet holder, since the helmet may hit objects, causing loss of control and possibly an accident.** [EWA10162]

EAUN2980

Storage compartments


This model is equipped with 2 storage compartments. The front storage compartment and rear storage compartment are located as shown.

Front storage compartment

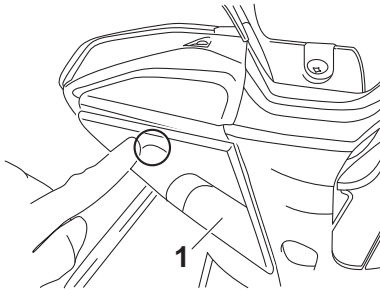


1. Front storage compartment lid

To open the storage compartment, push the front storage compartment lid as shown.

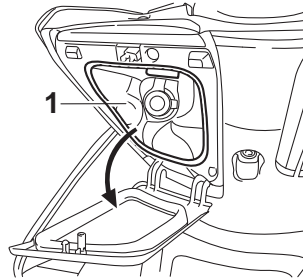

1. Front storage compartment

Rear storage compartment

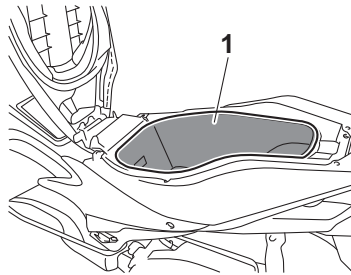

1. Rear storage compartment

To open the rear storage compartment, turn the main switch to “OPEN”, and then push the “SEAT” button.

TIP

- Do not leave your vehicle unattended with the seat open.
- Some helmets cannot be stored in the rear storage compartment because of their size or shape.

ECA21150

NOTICE

Keep the following points in mind when using the storage compartment.

- Since the storage compartment accumulates heat when exposed to the sun and/or the engine heat, do not store anything susceptible to heat, consumables or flammable items inside it.
- To avoid humidity from spreading through the storage compartment, wrap wet articles in a plastic bag before storing them in the compartment.
- Since the storage compartment may get wet while the vehicle is being washed, wrap any articles stored in the compartment in a plastic bag.

Instrument and control functions

- Do not keep anything valuable or breakable in the storage compartment.

EWA15861

WARNING


Do not exceed the following loading limits:

- Front storage compartment: 0.3 kg (1 lb)
- Rear storage compartment: 5.0 kg (11 lb)
- Maximum load for the vehicle: 153 kg (337 lb)

Power outlet

This model is equipped with a 12V DC power outlet.

EAUN2990

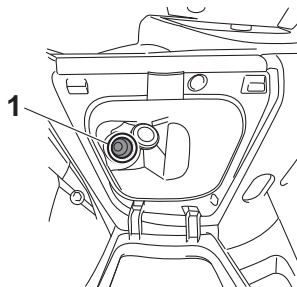

1. Power outlet

ECAN0140

NOTICE

Do not use the power outlet when the engine is off, and do not exceed the specified electrical load; otherwise the fuse may blow or the battery may discharge.

When washing the vehicle, do not direct high-pressure washers at the power outlet area.


Maximum electrical load:
12 W (1A)

To use the power outlet

1. Turn the vehicle power off.
2. Open the front storage compartment lid. (See page 7-19.)
3. Remove the power outlet cap.
4. Turn the accessory off.
5. Insert the accessory plug into the power outlet.
6. Turn the vehicle power on and start the engine.
7. Turn the accessory on.

TIP

When finished riding, turn off the accessory and disconnect it from the power outlet, and then install the cap.

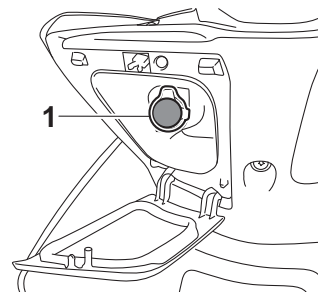

1. Power outlet cap

WARNING

EWAN0050

To prevent electrical shock or short-circuiting, install the cap when the power outlet is not in use.

EAU15306

this system regularly and have a Yamaha dealer repair it if it does not function properly.

Sidestand

The sidestand is located on the left side of the frame. Raise the sidestand or lower it with your foot while holding the vehicle upright.

TIP

The built-in sidestand switch is part of the ignition circuit cut-off system, which cuts the ignition in certain situations. (See the following section for an explanation of the ignition circuit cut-off system.)

EWA10242

WARNING


The vehicle must not be ridden with the sidestand down, or if the sidestand cannot be properly moved up (or does not stay up), otherwise the sidestand could contact the ground and distract the operator, resulting in a possible loss of control. Yamaha's ignition circuit cut-off system has been designed to assist the operator in fulfilling the responsibility of raising the sidestand before starting off. Therefore, check

Instrument and control functions

EAUT1098

Ignition circuit cut-off system

Check the operation of the sidestand switch according to the following procedure.

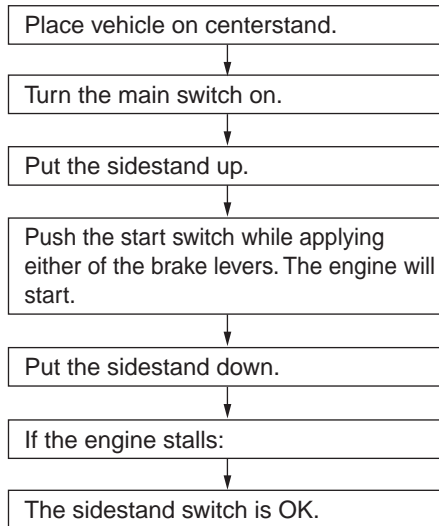

WARNING

- The vehicle must be placed on the centerstand during this inspection.
- If a malfunction is found, have the vehicle inspected before riding.

For your safety – pre-operation checks

EAU1559B

Inspect your vehicle each time you use it to make sure the vehicle is in safe operating condition. Always follow the inspection and maintenance procedures and schedules described in the Owner's Manual.

EWA11152

WARNING

Failure to inspect or maintain the vehicle properly increases the possibility of an accident or equipment damage. Do not operate the vehicle if you find any problem. If a problem cannot be corrected by the procedures provided in this manual, have the vehicle inspected by a Yamaha dealer.

Before using this vehicle, check the following points:

ITEM	CHECKS	PAGE
Fuel	<ul style="list-style-type: none">• Check fuel level in fuel tank.• Refuel if necessary.• Check fuel line for leakage.• Check fuel tank overflow hose for obstructions, cracks or damage, and check hose connection.	7-16, 7-17
Engine oil	<ul style="list-style-type: none">• Check oil level in engine.• If necessary, add recommended oil to specified level.• Check vehicle for oil leakage.	10-10
Final transmission oil	<ul style="list-style-type: none">• Check vehicle for oil leakage.	10-12
Coolant	<ul style="list-style-type: none">• Check coolant level in reservoir.• If necessary, add recommended coolant to specified level.• Check cooling system for leakage.	10-13
Front brake	<ul style="list-style-type: none">• Check operation.• If soft or spongy, have Yamaha dealer bleed hydraulic system.• Check brake pads for wear.• Replace if necessary.• Check fluid level in reservoir.• If necessary, add specified brake fluid to specified level.• Check hydraulic system for leakage.	10-21, 10-22

For your safety – pre-operation checks

ITEM	CHECKS	PAGE
Rear brake	<ul style="list-style-type: none"> • Check operation. • If soft or spongy, have Yamaha dealer bleed hydraulic system. • Check brake pads for wear. • Replace if necessary. • Check fluid level in reservoir. • If necessary, add specified brake fluid to specified level. • Check hydraulic system for leakage. 	10-21, 10-22
Throttle grip	<ul style="list-style-type: none"> • Make sure that operation is smooth. • Check throttle grip free play. • If necessary, have Yamaha dealer adjust throttle grip free play and lubricate cable and grip housing. 	10-17, 10-24
Control cables	<ul style="list-style-type: none"> • Make sure that operation is smooth. • Lubricate if necessary. 	10-23
Wheels and tires	<ul style="list-style-type: none"> • Check for damage. • Check tire condition and tread depth. • Check air pressure. • Correct if necessary. 	10-18, 10-19
Brake levers	<ul style="list-style-type: none"> • Make sure that operation is smooth. • Lubricate lever pivoting points if necessary. 	10-24
Centerstand, sidestand	<ul style="list-style-type: none"> • Make sure that operation is smooth. • Lubricate pivots if necessary. 	10-25
Chassis fasteners	<ul style="list-style-type: none"> • Make sure that all nuts, bolts and screws are properly tightened. • Tighten if necessary. 	—
Instruments, lights, signals and switches	<ul style="list-style-type: none"> • Check operation. • Correct if necessary. 	—
Sidestand switch	<ul style="list-style-type: none"> • Check operation of ignition circuit cut-off system. • If system is not working correctly, have Yamaha dealer check vehicle. 	7-21

Operation and important riding points

EAU15952

Read the Owner's Manual carefully to become familiar with all controls. If there is a control or function you do not understand, ask your Yamaha dealer.

EWA10272



Failure to familiarize yourself with the controls can lead to loss of control, which could cause an accident or injury.

Engine break-in

There is never a more important period in the life of your engine than the period between 0 and 1600 km (1000 mi). For this reason, you should read the following material carefully.

Since the engine is brand new, do not put an excessive load on it for the first 1600 km (1000 mi). The various parts in the engine wear and polish themselves to the correct operating clearances. During this period, prolonged full-throttle operation or any condition that might result in engine overheating must be avoided.

EAU16842

1600 km (1000 mi) and beyond

The vehicle can now be operated normally.

ECA10271

NOTICE

If any engine trouble should occur during the engine break-in period, immediately have a Yamaha dealer check the vehicle.

EAUM2012

0–1000 km (0–600 mi)

Avoid prolonged operation above 1/3 throttle. **NOTICE: After 1000 km (600 mi) of operation, be sure to replace the engine oil and final transmission oil.** [ECA11662]

1000–1600 km (600–1000 mi)

Avoid prolonged operation above 1/2 throttle.

Starting the engine

The ignition circuit cut-off system will enable starting when the sidestand is be up.

EAU86740

To start the engine

1. Turn the main switch on.
2. Confirm the indicator and warning light(s) come on for a few seconds, and the go off. (See page 7-2.)

TIP

- Do not start the engine if the engine trouble warning light remains on.
- The ABS warning light should come on and stay on until the vehicle reaches a speed of 10 km/h (6 mi/h).

ECA24110

NOTICE

If a warning or indicator light does not work as described above, have a Yamaha dealer check the vehicle.

3. Close the throttle completely.
4. While applying the front or rear brake, push the start switch.

5. Release the start switch when the engine starts, or after 5 seconds. Wait 10 seconds before pressing the switch again to allow battery voltage to restore.

ECA11043

NOTICE

For maximum engine life, never accelerate hard when the engine is cold!

EAUN0073

ECAN0072

NOTICE


Do not ride through deep water, otherwise the engine may be damaged. Avoid puddles because they may be deeper than expected.

Operation and important riding points

Starting off

EAU45093


1. While pulling the rear brake lever with your left hand and holding the grab bar with your right hand, push the scooter off the center-stand.

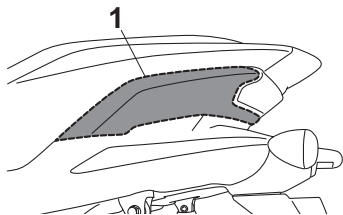

1. Grab bar

Acceleration and deceleration

EAU16782

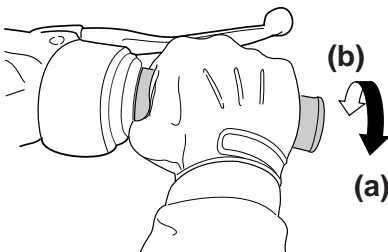

ZALIM0199

The speed can be adjusted by opening and closing the throttle. To increase the speed, turn the throttle grip in direction (a). To reduce the speed, turn the throttle grip in direction (b).

Braking

EAU60650

EWA17790

WARNING

- Avoid braking hard or suddenly (especially when leaning over to one side), otherwise the vehicle may skid or overturn.
- Railroad crossings, streetcar rails, iron plates on road construction sites, and manhole covers become extremely slippery when wet. Therefore, slow down when approaching such areas and cross them with caution.
- Keep in mind that braking on a wet road is much more difficult.
- Ride slowly down a hill, as braking downhill can be very difficult.

1. Close the throttle completely.
2. Apply both front and rear brakes simultaneously while gradually increasing the pressure.

2. Sit astride the seat, and then adjust the rear view mirrors.
3. Switch the turn signals on.
4. Check for oncoming traffic, and then slowly turn the throttle grip (on the right) in order to take off.
5. Switch the turn signals off.

EAU16821

Tips for reducing fuel consumption

Fuel consumption depends largely on your riding style. Consider the following tips to reduce fuel consumption:

- Avoid high engine speeds during acceleration.
- Avoid high engine speeds with no load on the engine.
- Turn the engine off instead of letting it idle for an extended length of time (e.g., in traffic jams, at traffic lights or at railroad crossings).

EAU77861

Parking

When parking, turn off the Stop and Start System and then stop the engine. After turning off the main switch, be sure to remove the key and take it with you. For smart key models, be sure to turn off the smart key and take with you.

EWA18840

WARNING

- **Since the engine and exhaust system can become very hot, park in a place where pedestrians or children are not likely to touch them and be burned.**
- **Do not park on a slope or on soft ground, otherwise the vehicle may overturn, increasing the risk of a fuel leak and fire.**
- **Do not park near grass or other flammable materials which might catch fire.**
- **If the Stop and Start System is left turned on, the battery could become discharged and it may not be possible to restart the engine due to insufficient battery voltage.**

TIP

Even when the vehicle is parked in a location partitioned by a fence or the glass window of a shop, if the smart key is within operating range, other people will be able to start the engine and operate the vehicle. Please turn the smart key off when leaving the vehicle. (See page 4-8.)

Periodic maintenance and adjustment

EAU17246

Periodic inspection, adjustment, and lubrication will keep your vehicle in the safest and most efficient condition possible. Safety is an obligation of the vehicle owner/operator. The most important points of vehicle inspection, adjustment, and lubrication are explained on the following pages.

The intervals given in the periodic maintenance charts should be simply considered as a general guide under normal riding conditions. However, depending on the weather, terrain, geographical location, and individual use, the maintenance intervals may need to be shortened.

EWA10322

WARNING

Failure to properly maintain the vehicle or performing maintenance activities incorrectly may increase your risk of injury or death during service or while using the vehicle. If you are not familiar with vehicle service, have a Yamaha dealer perform service.

EWA15123

WARNING

Turn off the engine when performing maintenance unless otherwise specified.

- **A running engine has moving parts that can catch on body parts or clothing and electrical parts that can cause shocks or fires.**
- **Running the engine while servicing can lead to eye injury, burns, fire, or carbon monoxide poisoning – possibly leading to death. See page 2-3 for more information about carbon monoxide.**


EWA15461

WARNING

Brake discs, calipers, drums, and linings can become very hot during use. To avoid possible burns, let brake components cool before touching them.

EAU85230

Tool kit

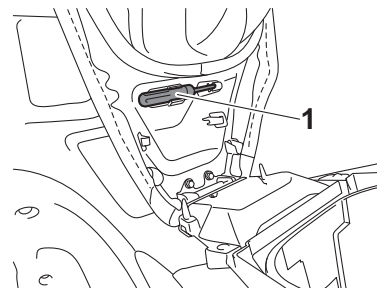

1. Tool kit

The tool kit is in the location shown. The information included in this manual and the tools provided in the tool kit are intended to assist you in the performance of preventive maintenance and minor repairs. However, a torque wrench and other tools are necessary to perform certain maintenance work correctly.

TIP

If you do not have the tools or experience required for a particular job, have your Yamaha dealer perform it for you.

Periodic maintenance and adjustment

TIP

- The annual checks must be performed every year, except if a kilometer-based maintenance is performed in-stand.
- From 12000 km, repeat the maintenance intervals starting from 1000 km.
- Items marked with an asterisk should be performed by a Yamaha dealer as they require special tools, data and tech-nical skills.

Periodic maintenance chart for the emission control system

NO.	ITEM	CHECK OR MAINTENANCE JOB	ODOMETER READING (whichever comes first)					ANNUAL CHECK
			500 km or 15 days	1000 km or 1 months	6000 km or 6 months	10000 km or 10 months	12000 km or 12 months	
1	* Fuel line	• Check fuel hoses for cracks or damage.		√	√	√	√	√
2	* Fuel filter	• Check condition. • Replace if necessary.	Every 12000 km (7500 mi)					
3	Spark plug	• Check condition. • Clean and regap.		√	√	√	√	
		• Replace.	Every 6000 km (3500 mi)					
4	* Valves	• Check valve clearance. • Adjust if necessary.			√		√	
5	* Fuel injection	• Check engine idle speed.		√	√	√	√	√
6	* Exhaust system	• Check for leakage. • Tighten if necessary. • Replace gasket(s) if necessary.		√	√	√	√	√

Periodic maintenance and adjustment

General maintenance and lubrication chart

NO.	ITEM	CHECK OR MAINTENANCE JOB	ODOMETER READING (whichever comes first)					ANNUAL CHECK
			500 km or 15 days	1000 km or 1 month	6000 km or 6 months	10000 km or 10 months	12000 km or 12 months	
1	* Diagnostic system check	<ul style="list-style-type: none"> Perform dynamic inspection using Yamaha diagnostic tool. Check the error codes. 	√	√	√	√	√	√
2	Air filter element	• Replace.	Every 6000 km (3500 mi)					
3	Air filter check hose	• Clean.	√	√	√	√	√	
4	* V-belt case air filter element	<ul style="list-style-type: none"> Clean. Replace if necessary. 		√	√	√	√	
5	* Battery	<ul style="list-style-type: none"> Check voltage. Charge if necessary. 	√	√	√	√	√	√
6	* Front brake	<ul style="list-style-type: none"> Check operation, fluid level and vehicle for fluid leakage. 	√	√	√	√	√	√
		• Replace brake pads.	Whenever worn to the limit					
7	* Rear brake	<ul style="list-style-type: none"> Check operation, fluid level and vehicle for fluid leakage. 	√	√	√	√	√	√
		• Replace brake pads.	Whenever worn to the limit					
8	* Brake hoses	<ul style="list-style-type: none"> Check for cracks or damage. Check for correct routing and clamping. 		√	√	√	√	√
		• Replace.	Every 4 years					
9	* Brake fluid	• Change.	Every 2 years					
10	* Wheels	• Check runout and for damage.		√	√	√	√	

Periodic maintenance and adjustment

NO.	ITEM	CHECK OR MAINTENANCE JOB	ODOMETER READING (whichever comes first)					ANNUAL CHECK
			500 km or 15 days	1000 km or 1 month	6000 km or 6 months	10000 km or 10 months	12000 km or 12 months	
11	* Tires	<ul style="list-style-type: none"> • Check tread depth and for damage. • Replace if necessary. • Check air pressure. • Correct if necessary. 		√	√	√	√	√
12	* Wheel bearings	<ul style="list-style-type: none"> • Check bearings for looseness or damage. 		√	√	√	√	
13	* Steering bearings	<ul style="list-style-type: none"> • Check bearing play and steering for roughness. 	√	√	√	√	√	
		<ul style="list-style-type: none"> • Lubricate with lithium-soap-based grease. 	Every 24000 km (14000 mi)					
14	* Chassis fasteners	<ul style="list-style-type: none"> • Make sure that all nuts, bolts and screws are properly tightened. 		√	√	√	√	√
15	Front brake lever pivot shaft	<ul style="list-style-type: none"> • Lubricate with silicone grease. 		√	√	√	√	√
16	Rear brake lever pivot shaft	<ul style="list-style-type: none"> • Lubricate with silicone grease. 		√	√	√	√	√
17	Sidestand, center-stand	<ul style="list-style-type: none"> • Check operation. • Lubricate with lithium-soap-based grease. 		√	√	√	√	√
18	* Sidestand switch	<ul style="list-style-type: none"> • Check operation. 	√	√	√	√	√	√
19	* Front fork	<ul style="list-style-type: none"> • Check operation and for oil leakage. 		√	√	√	√	
20	* Shock absorber assemblies	<ul style="list-style-type: none"> • Check operation and shock absorbers for oil leakage. 		√	√	√	√	

Periodic maintenance and adjustment

NO.		ITEM	CHECK OR MAINTENANCE JOB	ODOMETER READING (whichever comes first)					ANNUAL CHECK
				500 km or 15 days	1000 km or 1 month	6000 km or 6 months	10000 km or 10 months	12000 km or 12 months	
21		Engine oil	• Change.	√	Every 1000 km (600 mi)				
			• Check oil level and vehicle for oil leakage.	Every 1000 km (600 mi)					√
22	*	Engine oil strainer	• Clean.		√	√	√	√	√
23	*	Cooling system	• Check coolant level and vehicle for coolant leakage.	√	√	√	√	√	√
			• Change coolant.	Every 12000 km (7500 mi)					
24		Final transmission oil	• Check vehicle for oil leakage.	√	√	√	√	√	
			• Change.	√	Every 6000 km (3500 mi)				
25	*	V-belt	• Check for damage and wear.			√	√	√	
			• Replace.	When the V-belt replacement indicator flashes [every 25000 km (15500 mi)]					
26	*	V-belt secondary sheave	• Lubricate.	Every 12000 km (7500 mi)					
27	*	Front and rear brake switches	• Check operation.	√	√	√	√	√	√
28		Moving parts and cables	• Lubricate.		√	√	√	√	√
29	*	Throttle grip	• Check operation. • Check throttle grip free play, and adjust if necessary. • Lubricate cable and grip housing.		√	√	√	√	√
30	*	Lights, signals and switches	• Check operation. • Adjust headlight beam.	√	√	√	√	√	√

TIP


- Air filter
 - This model's air filter is equipped with a disposable oil-coated paper element, which must not be cleaned with compressed air to avoid damaging it.
 - The air filter element needs to be replaced more frequently when riding in unusually wet or dusty areas.
- V-belt case air filter
 - The air filter needs more frequent service if you are riding in unusually wet or dusty areas.
- V-belt
 - The V-belt should be checked at the initial 8000 km (5000 mi) and every 4000 km (2500 mi) thereafter. Replace the V-belt if any damage or excessive wear is found. The V-belt needs to be replaced every 25000 km (15500 mi) even if there is not wear or damage.
- Hydraulic brake service
 - Regularly check and, if necessary, correct the brake fluid level.
 - Every two years replace the internal components of the brake master cylinders and calipers, and change the brake fluid.
 - Replace the brake hoses every four years and if cracked or damaged.
- Fuel system service
 - Use only unleaded gasoline. The use of leaded gasoline will cause severe damage to internal engine parts, such as the valves and piston rings, as well as to the exhaust system.
 - Replace the fuel filler cover every two years or if cracked or damaged.
 - Check the fuel filter for clogging or damage every 12000 km (7500 mi).
- Battery service
 - Check the condition and service the battery every 3 months.
 - Recharge the battery immediately if the voltage is less than 12.7 V.
 - If the battery tends to discharge, replace it immediately.

Periodic maintenance and adjustment


Removing and installing panels

EAU18773

The panels shown need to be removed to perform some of the maintenance jobs described in this chapter. Refer to this section each time a panel needs to be removed and installed.

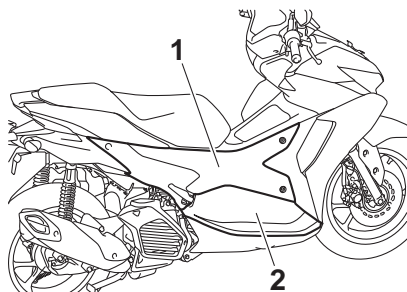


- 1. Panel A
- 2. Panel B

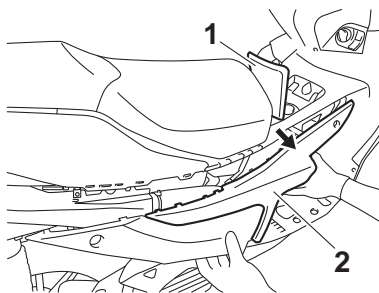

- 1. Fuel tank cap lid
- 2. Panel A
- 3. Extend the right passenger footrest, and then pull the panel outward.

To install the panel

- 1. Place the panel in the original position, and then install the screws.

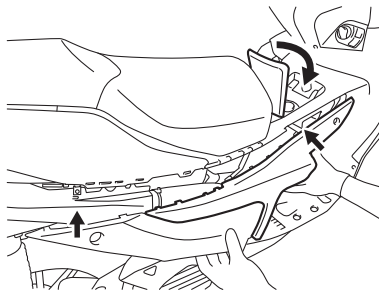

EAU18770

Panel A

To remove the panel


- 1. Open the fuel tank cap lid.
- 2. Remove the screws.

- 2. Retract the right passenger footrest to its original position.
- 3. Close the fuel tank cap lid.

Panel B

To remove the panel

- 1. Remove panel A.
- 2. Remove the right floorboard mat by pulling it up.
- 3. Remove the screws, quick fastener screws and bolts, and then pull the panel outward.

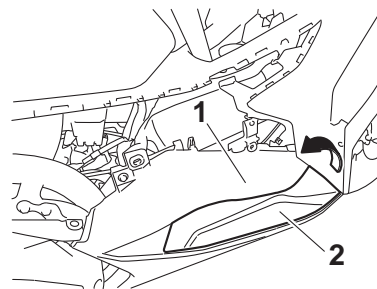


- 1. Panel B
- 2. Floorboard mat

Periodic maintenance and adjustment

To install the panel

1. Place the panel in the original position, and then install the screws, quick fastener screws and bolts.

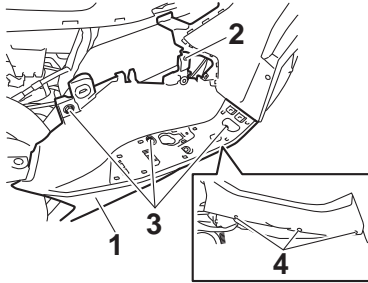

1. Panel B
2. Screw
3. Bolt
4. Quick fastener screw

2. Place the right floorboard mat in the original position and push it downward to secure it.
3. Install panel A.


Checking the spark plug

EAU67161

The spark plug is an important engine component, which is easy to check. Since heat and deposits will cause any spark plug to slowly erode, the spark plug should be removed and checked in accordance with the periodic maintenance and lubrication chart. In addition, the condition of the spark plug can reveal the condition of the engine.


To remove the spark plug

1. Place the vehicle on the center-stand.
2. Remove panels A and B. (See page 10-7.)
3. Remove the spark plug cap.

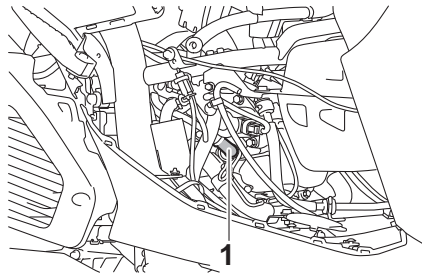

1. Spark plug cap

4. Remove the spark plug as shown, with the spark plug wrench included in the owner's tool kit.

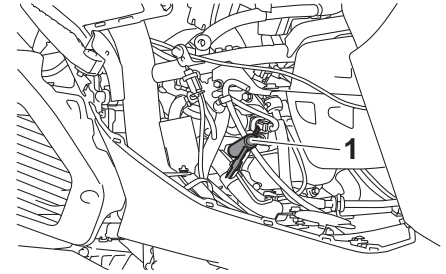

1. Spark plug wrench

To check the spark plug

1. Check that the porcelain insulator around the center electrode of the spark plug is a medium-to-light tan (the ideal color when the vehicle is ridden normally).

TIP


If the spark plug shows a distinctly different color, the engine could be operating improperly. Do not attempt to diagnose such problems yourself. Instead, have a Yamaha dealer check the vehicle.

Periodic maintenance and adjustment

2. Check the spark plug for electrode erosion and excessive carbon or other deposits, and replace it if necessary.

Specified spark plug:
NGK/CPR8EA-9

3. Measure the spark plug gap with a wire thickness gauge and, if necessary, adjust the gap to specification.

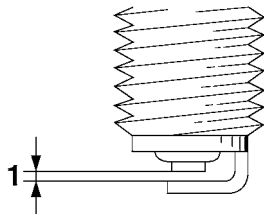

1. Spark plug gap

Spark plug gap:
0.8–0.9 mm (0.031–0.035 in)

To install the spark plug

1. Clean the surface of the spark plug gasket and its mating surface, and then wipe off any grime from the spark plug threads.
2. Install the spark plug with the spark plug wrench, and then tighten it to the specified torque.

Tightening torque:

Spark plug:
13 N·m (1.3 kgf·m, 9.6 lb·ft)


TIP

If a torque wrench is not available when installing a spark plug, a good estimate of the correct torque is 1/4–1/2 turn past finger tight. However, the spark plug should be tightened to the specified torque as soon as possible.

3. Install the spark plug cap.

TIP

Install the spark plug cap so that it is positioned as shown in the illustration and the spark plug lead does not contact any surrounding parts.

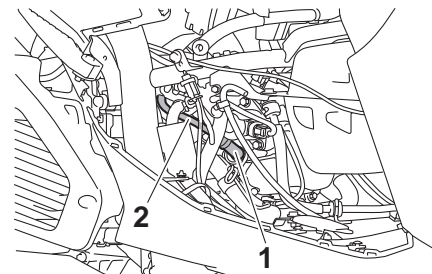

1. Spark plug cap
2. Spark plug lead

4. Install the panels.

EAU66994

Engine oil and oil strainer


The engine oil level should be checked before each ride. In addition, the oil must be changed and the oil strainer cleaned at the intervals specified in the periodic maintenance and lubrication chart.

To check the engine oil level

1. Place the vehicle on the center-stand. A slight tilt to the side can result in a false reading.
2. Start the engine, warm it up for several minutes, and then turn it off.
3. Wait a few minutes until the oil settles, remove the engine oil filler cap, wipe the engine oil dipstick clean, insert it back into the oil filler hole (without screwing it in), and then remove it again to check the oil level. **WARNING! The muffler and muffler protector become very hot during use. To avoid possible burns, let the muffler and protector cool before removing the oil filler cap.** [EWA17810]

TIP

The engine oil should be between the tip of the dipstick and the maximum level mark.

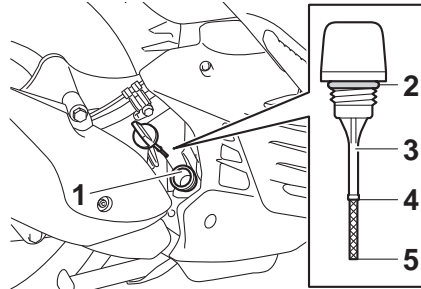

1. Oil filler hole
2. O-ring
3. Engine oil dipstick
4. Maximum level mark
5. Tip of the engine oil dipstick


4. If the engine oil is not between the tip of the dipstick and the maximum level mark, add sufficient oil of the recommended type to raise it to the correct level.
5. Insert the dipstick into the oil filler hole, and then tighten the oil filler cap.

To change the engine oil and clean the oil strainer

1. Start the engine, warm it up for several minutes, and then turn it off.
2. Place an oil pan under the engine to collect the used oil.
3. Remove the engine oil filler cap and engine oil drain bolts A and B to drain the oil from the crankcase. **NOTICE: When removing the engine oil drain bolt B, the O-ring, compression spring, and oil strainer will fall out. Take care not to lose these parts.**

[ECAT1022]

Periodic maintenance and adjustment

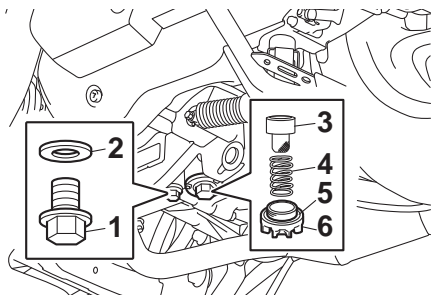

1. Engine oil drain bolt A
2. Gasket
3. Oil strainer
4. Compression spring
5. O-ring
6. Engine oil drain bolt B

4. Clean the engine oil strainer with solvent, and then check it for damage and replace it if necessary.
5. Install the engine oil strainer, compression spring, new O-ring and engine oil drain bolt B.

TIP _____
Make sure that the O-ring is properly seated.

6. Install engine oil drain bolt A and its new gasket, and then tighten both drain bolts to their specified torques.

Tightening torque:

Engine oil drain bolt A:
20 N·m (2.0 kgf·m, 15 lb·ft)
Engine oil drain bolt B:
20 N·m (2.0 kgf·m, 15 lb·ft)

7. Refill with the specified amount of the recommended engine oil, and then install and tighten the oil filler cap.

Recommended engine oil:

See page 12-1.

Oil quantity:

0.90 L (0.95 US qt, 0.79 Imp.qt)

TIP _____
Be sure to wipe off spilled oil on any parts after the engine and exhaust system have cooled down.

ECA24060

NOTICE

Make sure that no foreign material enters the crankcase.

8. Start the engine, and then let it idle for several minutes while checking it for oil leakage. If oil is leaking, immediately turn the engine off and check for the cause.
9. Turn the engine off, and then check the oil level and correct it if necessary.
10. Reset the oil change tripmeter and oil change indicator "OIL". (See page 7-9 for reset procedures.)


Periodic maintenance and adjustment

EAU67822

Final transmission oil


The final transmission case must be checked for oil leakage before each ride. If any leakage is found, have a Yamaha dealer check and repair your motorcycle. In addition, the final transmission oil must be changed as follows at the intervals specified in the periodic maintenance and lubrication chart.

1. Start the engine and warm up the final transmission oil by riding the motorcycle for several minutes.
2. Stop the engine and then place the motorcycle on the center-stand.
3. Place an oil pan under the final transmission case to collect the used oil.
4. Remove the final transmission oil filler cap and its O-ring from the final transmission case.

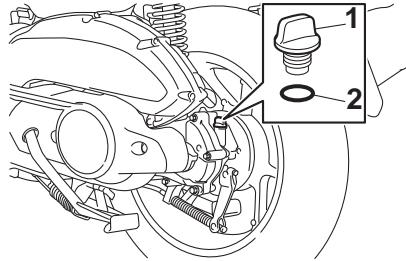

1. Final transmission oil filler cap
2. O-ring

5. Remove the final transmission oil drain bolt and its gasket to drain the oil from the final transmission case.

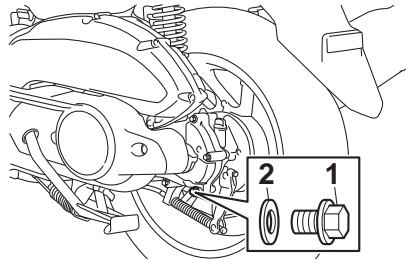

1. Final transmission oil drain bolt
2. Gasket

6. Install the final transmission oil drain bolt and its new gasket, and then tighten the bolt to the specified torque.

TIP

- Before installing the final transmission oil drain bolt and gasket, apply oil to them.
- Wipe off any excess oil afterwards.

Tightening torque:

Final transmission oil drain bolt:
20 N·m (2.0 kgf·m, 15 lb·ft)

7. Refill with the specified amount of the recommended final transmission oil. **WARNING! Make sure that no foreign material enters the final transmission case. Make sure that no oil gets on the tire or wheel.** [EWA11312]

Recommended final transmission oil:

See page 12-1.

Oil quantity:

0.10 L (0.11 US qt, 0.09 Imp.qt)


Periodic maintenance and adjustment

8. Install the final transmission oil filler cap and its new O-ring, and then tighten the oil filler cap.
9. Check the final transmission case for oil leakage. If oil is leaking, check for the cause.

Coolant

The coolant level should be checked before each ride. In addition, the coolant must be changed at the intervals specified in the periodic maintenance and lubrication chart.

EAU20071

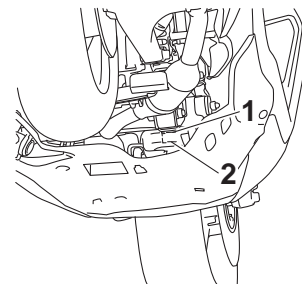

1. Maximum level mark
2. Minimum level mark

To check the coolant level

EAUN2930

1. Place the vehicle on the center-stand.

TIP


- The coolant level must be checked on a cold engine since the level varies with engine temperature.
- Make sure that the vehicle is positioned straight up when checking the coolant level. A slight tilt to the side can result in a false reading.

2. Check the coolant level in the coolant reservoir.

TIP


The coolant should be between the minimum and maximum level marks.

3. If the coolant is at or below the minimum level mark, remove the right floorboard mat by pulling it up.

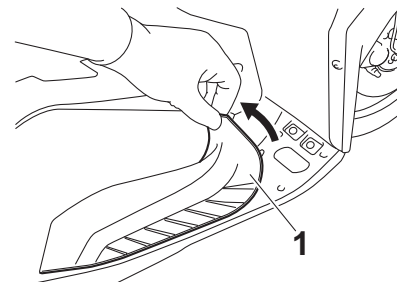

1. Floorboard mat

4. Remove the coolant reservoir cover.

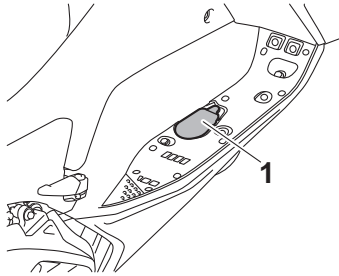


1. Coolant reservoir cover

5. Remove the coolant reservoir cap, add coolant to the maximum level mark, and then install the reservoir cap. **WARNING! Remove only the coolant reservoir cap. Never attempt to remove the radiator cap when the engine is hot.**

[EWA15162] **NOTICE:** If coolant is not available, use distilled water or soft tap water instead. Do not use hard water or salt water since it is harmful to the engine. If water has been used instead of coolant, replace it with coolant as soon as possible, otherwise the cooling system will not be protected against frost and corrosion. If water has been

added to the coolant, have a Yamaha dealer check the anti-freeze content of the coolant as soon as possible, otherwise the effectiveness of the coolant will be reduced. [ECA10473]

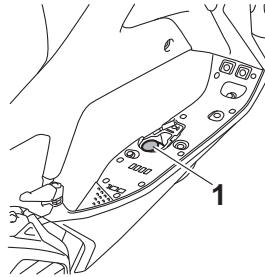

1. Coolant reservoir cap

Coolant reservoir capacity (up to the maximum level mark):
0.13 L (0.14 US qt, 0.11 Imp.qt)

6. Install the coolant reservoir cover.
7. Place the right floorboard mat in the original position and push it downward to secure it.

Changing the coolant

The coolant must be changed at the intervals specified in the periodic maintenance and lubrication chart. Have a Yamaha dealer change the coolant.

WARNING! Never attempt to remove the radiator cap when the engine is hot. [EWA10382]


Periodic maintenance and adjustment

EAU67174

Air filter and V-belt case air filter elements

The air filter element should be replaced and the V-belt case air filter element should be cleaned at the intervals specified in the periodic maintenance and lubrication chart. Service the air filter elements more frequently if you are riding in unusually wet or dusty areas. The air filter check hose and V-belt case air filter check hose must be frequently checked and cleaned if necessary.

Cleaning the air filter check hose

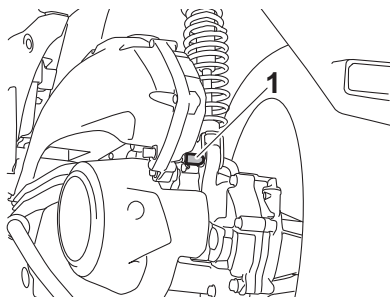

1. Air filter check hose


1. Check the hose on the rear side of the air filter case for accumulated dirt or water.
2. If dirt or water is visible, remove the hose from the clamp, clean it, and then install it.

TIP

If dirt or water was found in the check hose, be sure to check the air filter element for excessive dirt or damage and replace it if necessary.


Replacing the air filter element

1. Place the vehicle on the center-stand.
2. Remove the air filter case cover by removing the screws.

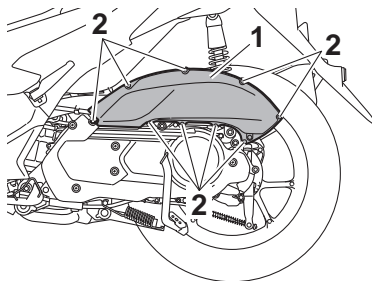

1. Air filter case cover
2. Screw

3. Pull the air filter element out.

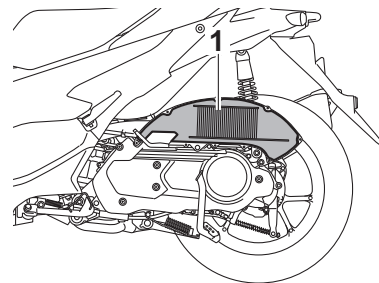

1. Air filter element

4. Insert a new air filter element into the air filter case. **NOTICE:** Make sure that the air filter element is properly seated in the air filter case. The engine should never be operated without the air filter element installed, otherwise the piston(s) and/or cylinder(s) may become excessively worn.

[ECA10482]

ECA21220

NOTICE


- The air filter element must be replaced at the intervals specified in the periodic maintenance chart.

Periodic maintenance and adjustment

- The air filter element should be replaced more frequently if you often ride in the rain or dusty areas.
- The air filter cannot be cleaned by blowing it with compressed air. It must be replaced.

5. Install the air filter case cover by installing the screws.

Cleaning the V-belt case check hose

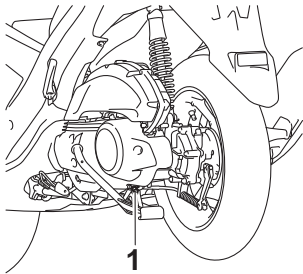

1. V-belt case check hose


1. Check the hose on the rear side of the V-belt case for accumulated dirt or water.
2. If dirt or water is visible, remove the hose from the clamp, clean it, and then install it.

TIP

If dirt or water was found in the check hose, be sure to check the V-belt case air filter element for excessive dirt or damage and clean or replace it if necessary.


Cleaning the V-belt case air filter element

1. Place the vehicle on the center-stand.
2. Remove the screws, and then pull the V-belt case air filter element cover outward and away from the V-belt case.

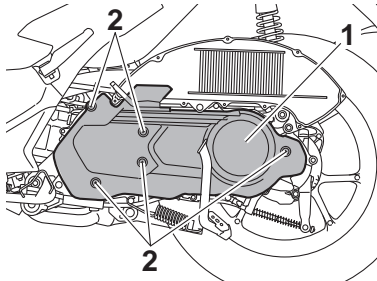

1. V-belt case air filter element cover
2. Screw

3. Pull the V-belt case air filter element out, and then clean it with solvent. After cleaning, remove the remaining solvent by squeezing the element. **WARNING! Use only a dedicated parts cleaning solvent. To avoid the risk of fire or explosion, do not use gasoline or solvents with a low flash point.** [EWA10432] **NOTICE: To avoid damaging the air filter element, handle it gently and carefully, and do not twist it.** [ECA10522]

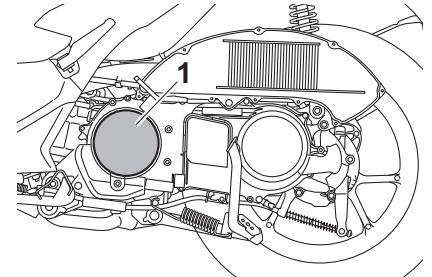


1. V-belt case air filter element

Periodic maintenance and adjustment

EAU21386

EAU21403

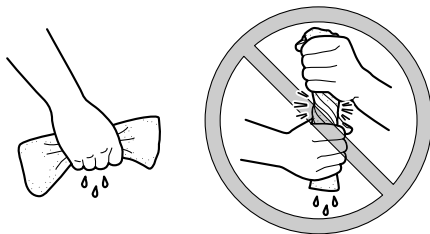

4. Apply oil of the recommended type to the entire surface of the sponge material, and then squeeze the excess oil out.

TIP

- The air filter element should be wet but not dripping.
- Check the air filter element for excessive dirt or damage and replace it if necessary.


Recommended oil:

Yamaha foam air filter oil or other quality foam air filter oil

5. Insert the element into the V-belt case.
6. Install the air filter element cover by installing the screws.

Checking the throttle grip free play

Measure the throttle grip free play as shown.

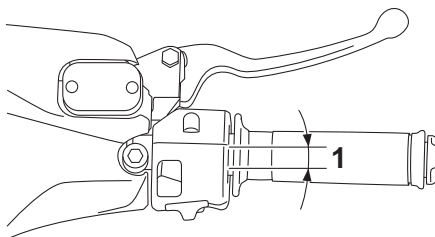

1. Throttle grip free play

Throttle grip free play:
3.0–5.0 mm (0.12–0.20 in)

Periodically check the throttle grip free play and, if necessary, have a Yamaha dealer adjust it.

Valve clearance

The valves are an important engine component, and since valve clearance changes with use, they must be checked and adjusted at the intervals specified in the periodic maintenance chart. Unadjusted valves can result in improper air-fuel mixture, engine noise, and eventually engine damage. To prevent this from occurring, have your Yamaha dealer check and adjust the valve clearance at regular intervals.

TIP

This service must be performed when the engine is cold.

Periodic maintenance and adjustment

Tires

Tires are the only contact between the vehicle and the road. Safety in all conditions of riding depends on a relatively small area of road contact. Therefore, it is essential to maintain the tires in good condition at all times and replace them at the appropriate time with the specified tires.

Tire air pressure

The tire air pressure should be checked and, if necessary, adjusted before each ride.

EAU82721

WARNING

Operation of this vehicle with improper tire pressure may cause severe injury or death from loss of control.

- The tire air pressure must be checked and adjusted on cold tires (i.e., when the temperature of the tires equals the ambient temperature).
- The tire air pressure must be adjusted in accordance with the riding speed and with the total

weight of rider, passenger, cargo, and accessories approved for this model.

Cold tire air pressure:

1 person:

Front:
200 kPa (2.00 kgf/cm², 29 psi)

Rear:
225 kPa (2.25 kgf/cm², 33 psi)

2 persons:

Front:
200 kPa (2.00 kgf/cm², 29 psi)

Rear:
225 kPa (2.25 kgf/cm², 33 psi)

Maximum load:

Vehicle:

153 kg (337 lb)

The vehicle's maximum load is the combined weight of the rider, passenger, cargo, and any accessories.


EWA10504

WARNING

Never overload your vehicle. Operation of an overloaded vehicle could cause an accident.

EWA10512

Tire inspection

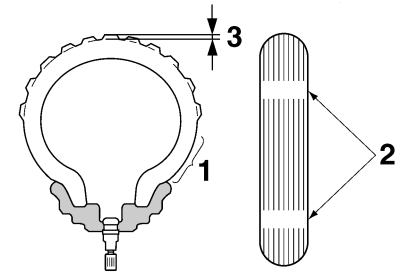

1. Tire sidewall
2. Tire wear indicator
3. Tire tread depth

The tires must be checked before each ride. If a tire tread shows crosswise lines (minimum tread depth), if the tire has a nail or glass fragments in it, or if the sidewall is cracked, contact a Yamaha dealer immediately and have the tire replaced.

Minimum tire tread depth (front and rear):

1.0 mm (0.04 in)

Periodic maintenance and adjustment

EWA10583

WARNING

- It is dangerous to ride with a worn-out tire. When a tire tread begins to show crosswise lines, have a Yamaha dealer replace the tire immediately.
- The replacement of all wheel and brake-related parts, including the tires, should be left to a Yamaha dealer, who has the necessary professional knowledge and experience to do so.
- Ride at moderate speeds after changing a tire since the tire surface must first be “broken in” for it to develop its optimal characteristics.

Tire information

This model is equipped with tubeless tires and tire air valves.

Tires age, even if they have not been used or have only been used occasionally. Cracking of the tread and sidewall rubber, sometimes accompanied by carcass deformation, is an evidence of

ageing. Old and aged tires shall be checked by tire specialists to ascertain their suitability for further use.

EWA10462

WARNING

The front and rear tires should be of the same make and design, otherwise the handling characteristics of the vehicle may be different, which could lead to an accident.

After extensive tests, only the tires listed below have been approved for this model by Yamaha.

Front tire:

Size:

110/80-14M/C 53P

Manufacturer/model:

IRC/SCT-005F

Rear tire:

Size:

140/70-14M/C 62P

Manufacturer/model:

IRC/SCT-005R

EAU21963

Cast wheels


To maximize the performance, durability, and safe operation of your vehicle, note the following points regarding the specified wheels.

- The wheel rims should be checked for cracks, bends, warp-age or other damage before each ride. If any damage is found, have a Yamaha dealer replace the wheel. Do not attempt even the smallest repair to the wheel. A deformed or cracked wheel must be replaced.
- The wheel should be balanced whenever either the tire or wheel has been changed or replaced. An unbalanced wheel can result in poor performance, adverse handling characteristics, and a shortened tire life.

Periodic maintenance and adjustment

Checking the front brake lever free play

EAU49351

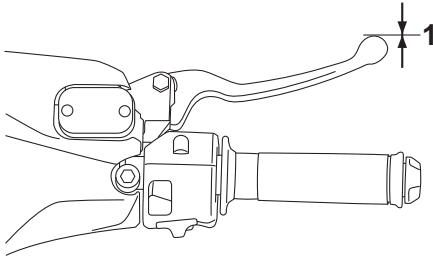

1. No brake lever free play

There should be no free play at the brake lever end. If there is free play, have a Yamaha dealer inspect the brake system.

EWA14212

WARNING


A soft or spongy feeling in the brake lever can indicate the presence of air in the hydraulic system. If there is air in the hydraulic system, have a Yamaha dealer bleed the system before operating the vehicle. Air in the hydraulic system will diminish the

braking performance, which may result in loss of control and an accident.

Adjusting the rear brake lever free play

EAU22172

Measure the rear brake lever free play as shown.

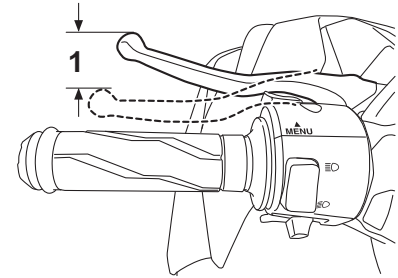


1. Rear brake lever free play

Rear brake lever free play:
10.0–20.0 mm (0.39–0.79 in)

Periodically check the brake lever free play and, if necessary, adjust it as follows.

To increase the brake lever free play, turn the adjusting nut at the brake shoe plate in direction (a). To decrease the brake lever free play, turn the adjusting nut in direction (b).

Periodic maintenance and adjustment

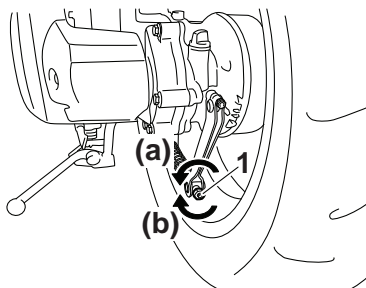

1. Rear brake lever free play adjusting nut

EWA10651

! WARNING

If proper adjustment cannot be obtained as described, have a Yamaha dealer make this adjustment.


Checking the front brake pads and rear brake shoes

EAU22382

The front brake pads and the rear brake shoes must be checked for wear at the intervals specified in the periodic maintenance and lubrication chart.

Front brake pads

EAU22434

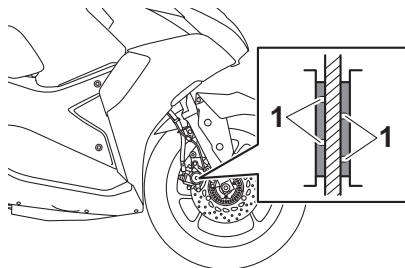


1. Brake pad wear indicator groove

Each front brake pad is provided with wear indicator grooves, which allow you to check the brake pad wear without having to disassemble the brake. To check the brake pad wear, check the wear indicator grooves. If a brake pad has worn to the point that the wear

indicator grooves have almost disappeared, have a Yamaha dealer replace the brake pads as a set.

Rear brake shoes

EAU22541

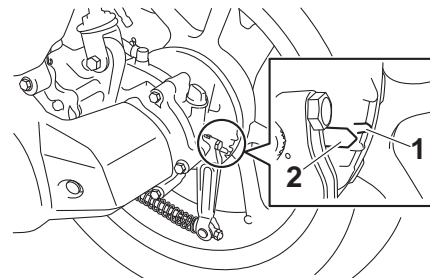

1. Brake shoe wear indicator
2. Brake shoe wear limit line


The rear brake is provided with a wear indicator, which allows you to check the brake shoe wear without having to disassemble the brake. To check the brake shoe wear, check the position of the wear indicator while applying the brake. If a brake shoe has worn to the point that the wear indicator reaches the wear limit line, have a Yamaha dealer replace the brake shoes as a set.

Periodic maintenance and adjustment

Checking the brake fluid level

EAUN2470

Before riding, check that the brake fluid is above the minimum level mark. Check the brake fluid level with the top of the reservoir level. Replenish the brake fluid if necessary.

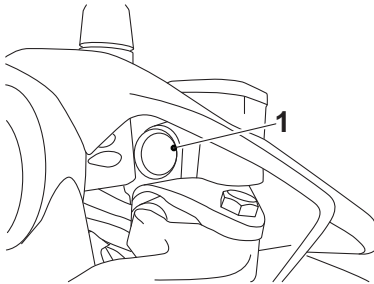

1. Minimum level mark

Specified brake fluid:

Non-ABS model:
DOT 3 or DOT 4

ABS model:
YAMAHA GENUINE BRAKE FLU-
ID DOT 4

EWAN0060



WARNING

Improper maintenance can result in loss of braking ability. Observe these precautions:

- **Insufficient brake fluid may allow air to enter the brake system, reducing braking performance.**
- **Clean the filler cap before removing. Use only brake fluid from a sealed container.**
- **Use only the specified brake fluid; otherwise, the rubber seals may deteriorate, causing leakage.**
- **Refill with the same type of brake fluid. Mixing brake fluids may result in a harmful chemical reaction.**
- **Be careful that water or dust does not enter the brake fluid reservoir when refilling. Water will significantly lower the boiling point of the fluid and may result in vapor lock, and dirt may clog the ABS hydraulic unit valves.**

As the brake pads wear, it is normal for the brake fluid level to gradually go down. A low brake fluid level may indicate worn brake pads and/or brake system leakage; therefore, be sure to check the brake pads for wear and the brake system for leakage. If the brake fluid level goes down suddenly, have a Yamaha dealer check the cause before further riding.

ECA17641

NOTICE

Brake fluid may damage painted surfaces or plastic parts. Always clean up spilled fluid immediately.

Periodic maintenance and adjustment

Changing the brake fluid

EAU22734

Have a Yamaha dealer change the brake fluid every 2 years. In addition, have the seals of the master cylinders and brake calipers, as well as the brake hoses replaced at the intervals listed below or sooner if they are damaged or leaking.

- Brake seals: every 2 years
- Brake hoses: every 4 years

Checking the V-belt

EAU00311

The V-belt must be checked and replaced by a Yamaha dealer at the intervals specified in the periodic maintenance and lubrication chart.

Checking and lubricating the cables

EAU23098

The operation of all control cables and the condition of the cables should be checked before each ride, and the cables and cable ends should be lubricated if necessary. If a cable is damaged or does not move smoothly, have a Yamaha dealer check or replace it. **WARNING! Damage to the outer housing of cables may result in internal rusting and cause interference with cable movement. Replace damaged cables as soon as possible to prevent unsafe conditions.** [EWA10712]

Recommended lubricant:

Yamaha cable lubricant or other suitable cable lubricant

Periodic maintenance and adjustment

Checking and lubricating the throttle grip and cable

EAU49921


The operation of the throttle grip should be checked before each ride. In addition, the cable should be lubricated by a Yamaha dealer at the intervals specified in the periodic maintenance chart.

Lubricating the front and rear brake levers


EAU23173

Recommended lubricant:
Silicone grease

Front brake lever

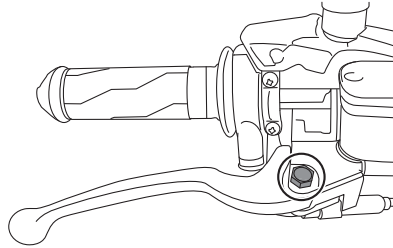

Rear brake lever

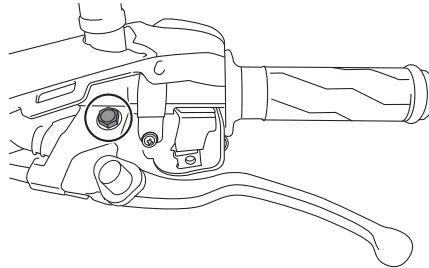


The pivoting points of the front and rear brake levers must be lubricated at the intervals specified in the periodic maintenance and lubrication chart.

Periodic maintenance and adjustment

Checking and lubricating the centerstand and sidestand

EAU23215

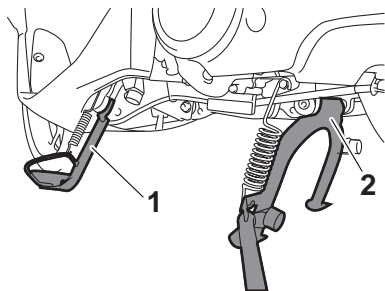

The operation of the centerstand and sidestand should be checked before each ride, and the pivots and metal-to-metal contact surfaces should be lubricated if necessary.

EWA10742

WARNING

If the centerstand or sidestand does not move up and down smoothly, have a Yamaha dealer check or repair it. Otherwise, the centerstand or sidestand could contact the ground and distract the operator, resulting in a possible loss of control.

Recommended lubricant:
Lithium-soap-based grease

Checking the front fork

EAU23273

The condition and operation of the front fork must be checked as follows at the intervals specified in the periodic maintenance and lubrication chart.

To check the condition

Check the inner tubes for scratches, damage and excessive oil leakage.


To check the operation

1. Place the vehicle on a level surface and hold it in an upright position. **WARNING! To avoid injury, securely support the vehicle so there is no danger of it falling over.** [EWA10752]
2. While applying the front brake, push down hard on the handlebars several times to check if the front fork compresses and rebounds smoothly.

Periodic maintenance and adjustment

EAU45512

EAU23292

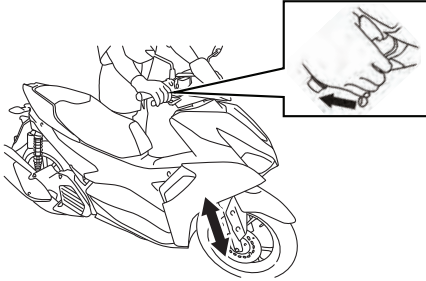

ECA10591


NOTICE

If any damage is found or the front fork does not operate smoothly, have a Yamaha dealer check or repair it.


Checking the steering

Worn or loose steering bearings may cause danger. Therefore, the operation of the steering must be checked as follows at the intervals specified in the periodic maintenance and lubrication chart.

1. Place the vehicle on the center-stand. **WARNING! To avoid injury, securely support the vehicle so there is no danger of it falling over.** [EWA10752]
2. Hold the lower ends of the front fork legs and try to move them forward and backward. If any free play can be felt, have a Yamaha dealer check or repair the steering.

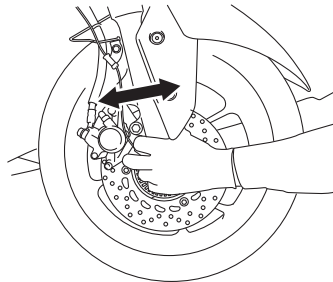

Checking the wheel bearings

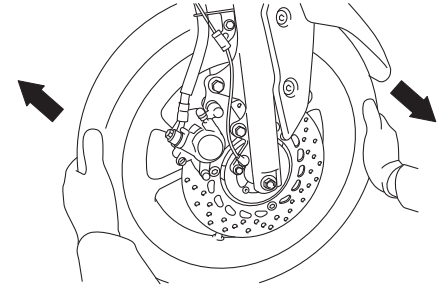


The front and rear wheel bearings must be checked at the intervals specified in the periodic maintenance and lubrication chart. If there is play in the wheel hub or if the wheel does not turn smoothly, have a Yamaha dealer check the wheel bearings.

Periodic maintenance and adjustment

Battery

EAU50292

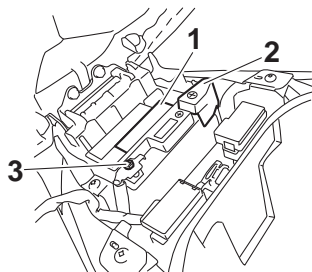

1. Battery
2. Positive battery lead (red)
3. Negative battery lead (black)

The battery is located under the seat. (See page 7-17.)

This model is equipped with a VRLA (Valve Regulated Lead Acid) battery. There is no need to check the electrolyte or to add distilled water. However, the battery lead connections need to be checked and, if necessary, tightened.

EWA10761

WARNING

- **Electrolyte is poisonous and dangerous since it contains sulfuric acid, which causes severe**

burns. Avoid any contact with skin, eyes or clothing and always shield your eyes when working near batteries. In case of contact, administer the following FIRST AID.

- **EXTERNAL:** Flush with plenty of water.
- **INTERNAL:** Drink large quantities of water or milk and immediately call a physician.
- **EYES:** Flush with water for 15 minutes and seek prompt medical attention.
- **Batteries produce explosive hydrogen gas. Therefore, keep sparks, flames, cigarettes, etc., away from the battery and provide sufficient ventilation when charging it in an enclosed space.**
- **KEEP THIS AND ALL BATTERIES OUT OF THE REACH OF CHILDREN.**

To charge the battery

Have a Yamaha dealer charge the battery as soon as possible if it seems to have discharged. Keep in mind that the

battery tends to discharge more quickly if the vehicle is equipped with optional electrical accessories.

ECA16522

NOTICE

To charge a VRLA (Valve Regulated Lead Acid) battery, a special (constant-voltage) battery charger is required. Using a conventional battery charger will damage the battery.

To store the battery

1. If the vehicle will not be used for more than one month, remove the battery, fully charge it, and then place it in a cool, dry place. **NOTICE:** When removing the battery, be sure to turn the main switch off, then disconnect the negative lead before disconnecting the positive lead. [ECA16304]
2. If the battery will be stored for more than two months, check it at least once a month and fully charge it if necessary.
3. Fully charge the battery before installation. **NOTICE:** When installing the battery, be sure to turn the main switch off, then con-

nect the positive lead before connecting the negative lead.

[ECA16842]

4. After installation, make sure that the battery leads are properly connected to the battery terminals.

ECA16531


NOTICE

Always keep the battery charged. Storing a discharged battery can cause permanent battery damage.

Replacing the fuses


The fuse boxes, which contain the fuses for the individual circuits, are located under the seat. (See page 7-17.)

GDR155-A

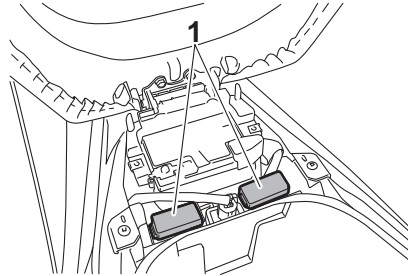

1. Fuse box


GDR155

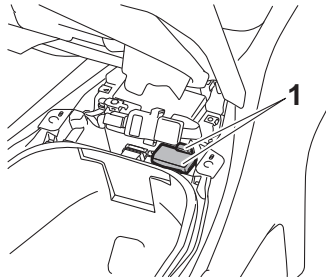

1. Fuse box

EAU66797


GDR155-A

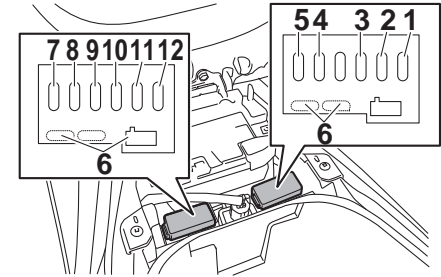

1. Signaling system fuse
2. Terminal fuse 1
3. Smart key system fuse
4. ABS motor fuse
5. ABS solenoid fuse
6. Spare fuse
7. Fuel injection system fuse
8. Backup fuse
9. Main fuse
10. Ignition fuse
11. Headlight fuse
12. ABS control unit fuse

Periodic maintenance and adjustment


GDR155

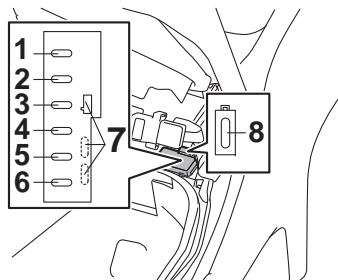

1. Terminal fuse 1
2. Headlight fuse
3. Ignition fuse
4. Main fuse
5. Backup fuse
6. Fuel injection system fuse
7. Spare fuse
8. Signaling system fuse

If a fuse is blown, replace it as follows.

1. Turn off the electrical circuit in question, and then turn off the main switch.
2. Open the seat. (See page 7-17.)
3. Remove the battery cover by removing the screws.

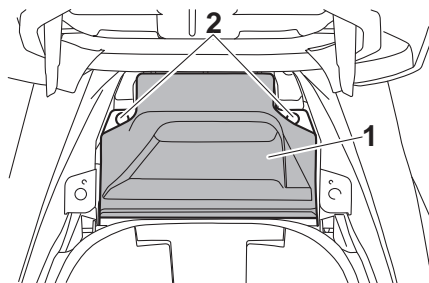

1. Battery cover
2. Screw

4. Remove the blown fuse, and then install a new fuse of the specified amperage. **WARNING! Do not use a fuse of a higher amperage rating than recommended to avoid causing extensive damage to the electrical system and possibly a fire.** [EWA15132]

Specified fuses:

- Main fuse:
30.0 A
- Terminal fuse 1:
5.0 A
- Headlight fuse:
7.5 A
- Signaling system fuse:
7.5 A
- Ignition fuse:
7.5 A
- Smart key system fuse:
5.0 A (GDR155-A)
- ABS motor fuse:
10.0 A (GDR155-A)
- Fuel injection system fuse:
7.5 A
- ABS solenoid fuse:
7.5 A (GDR155-A)
- ABS control unit fuse:
5.0 A (GDR155-A)
- Backup fuse:
7.5 A

5. Turn the main switch on, and then turn on the electrical circuit in question to check if the device operates.

Periodic maintenance and adjustment

TIP _____


If the fuse immediately blows again, have a Yamaha dealer check the electrical system.

6. Install the battery cover by installing the screws.
7. Close the seat.

Vehicle lights

EAUN2261

This model is equipped with LED lights for headlights, auxiliary lights and brake/tail light. If a light does not come on, check the fuse and then have a Yamaha dealer check the vehicle.

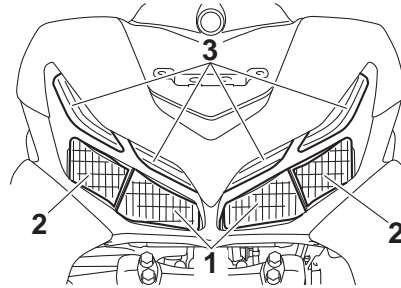

1. Headlight (high beam)
2. Headlight (low beam)
3. Auxiliary light

NOTICE

ECA16581

Do not affix any type of tinted film or stickers to the headlight lens.

EAU43054

Replacing a front turn signal light bulb

1. Place the vehicle on the center-stand.
2. Remove the turn signal light bulb socket (together with the bulb) by turning it counterclockwise.




1. Turn signal light bulb socket
3. Remove the burnt-out bulb by pulling it out.

Periodic maintenance and adjustment

EAUJ1121


Replacing a rear turn signal light bulb

1. Remove the rear turn signal lens by removing the screw.

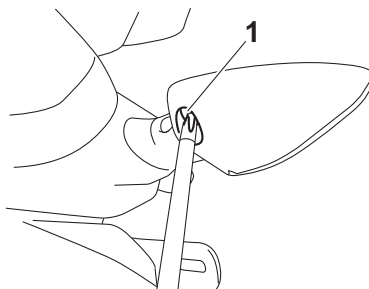

1. Screw

2. Remove the burnt-out bulb by pulling it out.

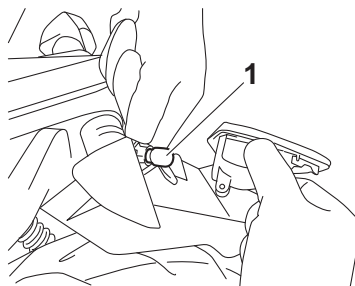

1. Turn signal light bulb

3. Insert a new bulb into the socket by pushing it in.

ECAU0081

NOTICE

If a turn signal light bulb of different wattage than recommended is used, the turn signal light flashing may be affected.

4. Install the lens by installing the screw. **NOTICE:** Do not over-tighten the screw, otherwise the lens may break. [ECA11192]


1. Turn signal light bulb

4. Insert a new bulb into the socket.
5. Install the socket (together with the bulb) by turning it clockwise.

EAUM3510


Replacing the license plate light bulb

1. Remove the license plate light unit by removing the screw.

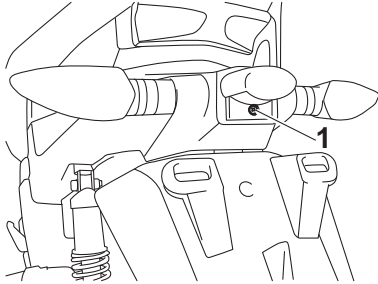

1. Screw

2. Remove the license plate light bulb socket (together with the bulb) by pulling it out.

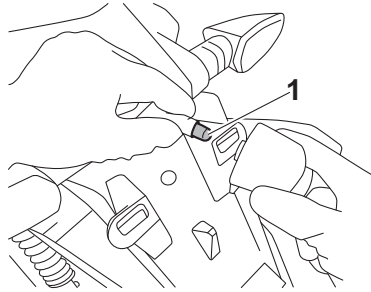

1. License plate light bulb

3. Remove the burnt-out bulb by pulling it out.
4. Insert a new bulb into the socket.
5. Install the socket (together with the bulb) by pushing it in.
6. Install the license plate light unit by installing the screw.

Troubleshooting

Although Yamaha vehicles receive a thorough inspection before shipment from the factory, trouble may occur during operation. Any problem in the fuel, compression, or ignition systems, for example, can cause poor starting and loss of power.

The following troubleshooting charts represent quick and easy procedures for checking these vital systems yourself. However, should your vehicle require any repair, take it to a Yamaha dealer, whose skilled technicians have the necessary tools, experience, and know-how to service the vehicle properly.

Use only genuine Yamaha replacement parts. Imitation parts may look like Yamaha parts, but they are often inferior, have a shorter service life and can lead to expensive repair bills.

EWA15142

WARNING

When checking the fuel system, do not smoke, and make sure there are no open flames or sparks in the area, including pilot lights from water

Periodic maintenance and adjustment

heaters or furnaces. Gasoline or gasoline vapors can ignite or explode, causing severe injury or property damage.

Smart key system troubleshooting (GDR155-A)

EAU76551

Please check the following items when the smart key system does not work.

- Is the smart key turned on? (See page 4-4.)
- Is the smart key battery discharged? (See page 4-6.)
- Is the smart key battery installed correctly? (See page 4-6.)
- Is the smart key being used in a location with strong radio waves or other electromagnetic noise? (See page 4-1.)
- Are you using the smart key that is registered to the vehicle?
- Is the vehicle battery discharged? When the vehicle battery is discharged, the smart key system will not operate. Please have the vehicle battery charged or replaced. (See page 10-27.)

If the smart key system does not work after checking the above items, have a Yamaha dealer check the smart key system.

TIP


See Emergency mode on page 10-37 for information on starting the engine without the smart key.

EAU76843

Stop and Start System troubleshooting (GDR155-A)

If a problem occurs, check the following before taking the vehicle to a Yamaha dealer.

The Stop and Start System indicator light does not come on.

1. Is the main switch turned on?
2. Is the Stop and Start System switch set to “”?
3. Was the engine warmed up sufficiently after starting?
4. After the engine was warmed up, was the engine left idling for a certain period of time?
5. Did the vehicle travel at a speed of 10 km/h or higher?

Even if the preceding conditions are met, the Stop and Start System may not activate in order to preserve battery power. In this case, continue to drive the vehicle.

In addition, the Stop and Start System indicator light does not come on if the engine trouble warning light is on.

If the Stop and Start System indicator light still does not come on after you checked the preceding conditions, have a Yamaha dealer check the vehicle as soon as possible.

The Stop and Start System indicator light comes on, but the engine does not stop automatically.


1. Was the vehicle stopped completely?
The engine may not stop automatically until the vehicle is stopped for a certain period of time. Try bringing the vehicle to a complete stop.
2. Is the throttle grip turned?
The engine does not stop automatically if the throttle grip is not in the fully closed position.


Periodic maintenance and adjustment

Turn the throttle grip to the fully closed position.

If the engine still does not stop automatically after you checked the preceding conditions, have a Yamaha dealer check the vehicle as soon as possible.

After the engine was stopped by the Stop and Start System, the engine does not restart even if the throttle grip is turned.

1. Is the Stop and Start System switch set to “”?

If the Stop and Start System switch is set to “” while the Stop and Start System is activated, the Stop and Start System will be turned off.

2. Was the sidestand operated?
When the sidestand is lowered, the Stop and Start System is deactivated.
3. Was the engine left stopped by the Stop and Start System for a long period of time?

If the engine is left stopped by the Stop and Start System for a long period of time, the battery could become discharged.


If the engine still does not restart after you checked the preceding conditions, have a Yamaha dealer check the vehicle as soon as possible.

Periodic maintenance and adjustment


EAU86350

Troubleshooting chart


1. Fuel

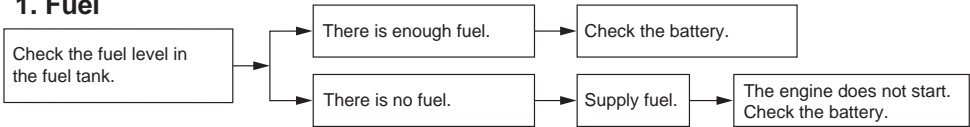


2. Battery

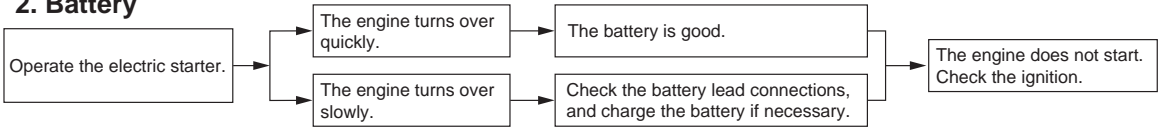

3. Ignition

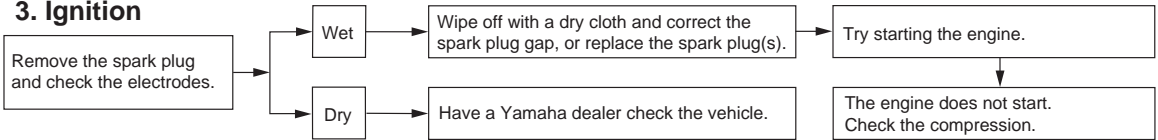

4. Compression

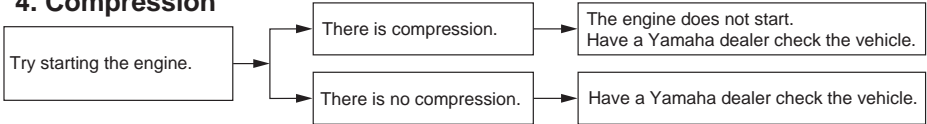

Periodic maintenance and adjustment


EAU86420

Engine overheating

EWAT1041

WARNING

- Do not remove the radiator cap when the engine and radiator are hot. Scalding hot fluid and steam may be blown out under pressure, which could cause serious injury. Be sure to wait until the engine has cooled.
- Place a thick rag, like a towel, over the radiator cap, and then slowly rotate the cap counterclockwise to the detent to allow any residual pressure to escape. When the hissing sound has stopped, press down on the cap while turning it counterclockwise, and then remove the cap.

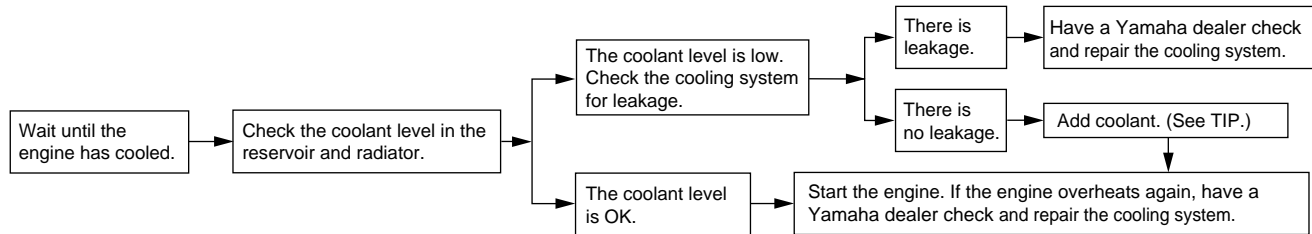

TIP

If coolant is not available, tap water can be temporarily used instead, provided that it is changed to the recommended coolant as soon as possible.

Periodic maintenance and adjustment


EAU76561

Emergency mode (GDR155-A)


When the smart key is lost or damaged, or its battery has discharged, the vehicle can still be turned on and the engine started. You will need the smart system identification number.

To operate the vehicle in emergency mode

1. Stop the vehicle in a safe place and turn the main switch to "OFF".
2. Push the main switch knob for 5 seconds until the smart key system indicator light flashes once, then release it. Repeat two more times. The smart key system indicator light will come on for three seconds to indicate the transition to emergency mode.

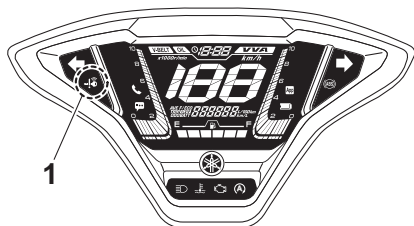

1. Smart key system indicator light "key icon"
3. After the smart key system indicator light goes off, input the identification number as follows.

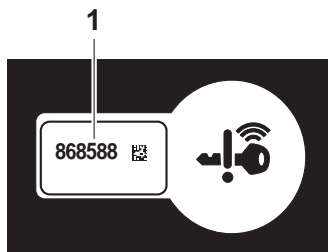

1. Identification number card


4. Inputting the identification number is done by counting the number of flashes of the smart key system indicator light.

For example, if the identification number is 123456:

Push and hold the knob.



The smart key system indicator light will start to flash.



Release the knob after the smart key system indicator light flashes once.



The first digit of the identification number has been set as "1".



Push and hold the knob again.





Release the knob after the smart key system indicator light flashes twice.



The second digit has been set as "2".



Repeat the above procedure until all digits of the identification number have been set. The smart key system indicator light will flash for 10 seconds if the correct identification number was entered.

TIP

When one of the following situations applies, emergency mode will be terminated and the smart key system indicator light will flash quickly for 3 seconds. In this case, start over again from step 2.

- When there are no knob operations for 10 seconds during the identification number input process.
- When the smart key system indicator light is allowed to flash nine or more times.
- The identification number is not entered correctly.

5. While the smart key system indicator light is on, push the knob once more to complete emergency mode access. The smart key indicator light will go off and then come back on for approximately 4 seconds.
6. While the smart key system indicator light is on, turn the main switch to "ON". The vehicle can now be operated normally.

Motorcycle care and storage

Matte color caution

EAU37834

ECA15193

NOTICE

Some models are equipped with matte colored finished parts. Be sure to consult a Yamaha dealer for advice on what products to use before cleaning the vehicle. Using a brush, harsh chemical products or cleaning compounds when cleaning these parts will scratch or damage their surface. Wax also should not be applied to any matte colored finished parts.

Care

EAU84990

Frequent, thorough cleaning of the vehicle will not only enhance its appearance but also will improve its general performance and extend the useful life of many components. Washing, cleaning, and polishing will also give you a chance to inspect the condition of the vehicle more frequently. Be sure to wash the vehicle after riding in the rain or near the sea, because salt is corrosive to metals.

TIP

- Genuine Yamaha care and maintenance products are sold under the YAMALUBE brand in many markets worldwide.
- See your Yamaha dealer for additional cleaning tips.

ECA26280

NOTICE

Improper cleaning can cause cosmetic and mechanical damage. Do not use:

- high-pressure washers or steam-jet cleaners. Excessive water pressure may cause wa-

ter seepage and deterioration of wheel bearings, brakes, transmission seals and electrical devices. Avoid high-pressure detergent applications such as those available in coin-operated car washers.

- harsh chemicals, including strong acidic wheel cleaners, especially on spoke or magnesium wheels.
 - harsh chemicals, abrasive cleaning compounds, or wax on matte-finished parts. Brushes can scratch and damage the matte-finish, use soft sponge or towel only.
 - towels, sponges, or brushes contaminated with abrasive cleaning products or strong chemicals such as, solvents, gasoline, rust removers, brake fluid, or antifreeze, etc.
-

Before washing

1. Park the vehicle out of direct sunlight and allow it to cool. This will help avoid water spots.

2. Make sure all caps, covers, electrical couplers and connectors are tightly installed.
3. Cover the muffler end with a plastic bag and a strong rubber band.
4. Pre-soak stubborn stains like insects or bird droppings with a wet towel for a few minutes.
5. Remove road grime and oil stains with a quality degreasing agent and a plastic-bristle brush or sponge. **NOTICE: Do not use degreasing agent on areas requiring lubrication such as seals, gaskets, and wheel axles. Follow product instructions.**

[ECA26290]

Washing

1. Rinse off any degreaser and spray down the vehicle with a garden hose. Use only enough pressure to do the job. Avoid spraying water directly into the muffler, instrument panel, air inlet, or other inner areas such as underseat storage compartments.
2. Wash the vehicle with a quality automotive-type detergent mixed with cool water and a soft, clean towel or sponge. Use an old toothbrush or plastic-bristle brush for hard-to-reach places. **NOTICE: Use cold water if the vehicle has been exposed to salt. Warm water will increase salt's corrosive properties.** [ECA26301]
3. For windshield-equipped vehicles: Clean the windshield with a soft towel or sponge dampened with water and a pH neutral detergent. If necessary, use a high-quality windshield cleaner or polish for motorcycles. **NOTICE: Never use any strong chemicals to clean the windshield. Additionally, some cleaning compounds for plastic may scratch the windshield, so be sure to test all cleaning products before general application.** [ECA26310]
4. Rinse off thoroughly with clean water. Be sure to remove all detergent residues, as they can be harmful to plastic parts.

After washing

1. Dry the vehicle with a chamois or absorbent towel, preferably microfiber terrycloth.
2. For drive chain-equipped models: Dry and then lubricate the drive chain to prevent rust.
3. Use a chrome polish to shine chrome, aluminum, and stainless steel parts. Often the thermally induced discoloring of stainless steel exhaust systems can be removed through polishing.
4. Apply a corrosion protection spray on all metal parts including chrome or nickel-plated surfaces. **WARNING! Do not apply silicone or oil spray to seats, hand grips, rubber foot pegs or tire treads. Otherwise these parts will become slippery, which could cause loss of control. Thoroughly clean the surfaces of these parts before operating the vehicle.** [EWA20650]
5. Treat rubber, vinyl, and unpainted plastic parts with a suitable care product.

Motorcycle care and storage

6. Touch up minor paint damage caused by stones, etc.
7. Wax all painted surfaces using a non-abrasive wax or use a detail spray for motorcycles.
8. When finished cleaning, start the engine and let it idle for several minutes to help dry any remaining moisture.
9. If the headlight lens has fogged up, start the engine and turn on the headlight to help remove the moisture.
10. Let the vehicle dry completely before storing or covering it.

ECA26320

NOTICE

- Do not apply wax to rubber or unpainted plastic parts.
- Do not use abrasive polishing compounds as they will wear away the paint.
- Apply sprays and wax sparingly. Wipe off excess afterwards.

EWA20660

WARNING

Contaminants left on the brakes or tires can cause loss of control.

- **Make sure there is no lubricant or wax on the brakes or tires.**
- **If necessary, wash the tires with warm water and a mild detergent.**
- **If necessary, clean the brake discs and pads with brake cleaner or acetone.**
- **Before riding at higher speeds, test the vehicle's braking performance and cornering behavior.**

EAU83472

Storage

Always store the vehicle in a cool, dry place. If necessary, protect it against dust with a porous cover. Be sure the engine and the exhaust system are cool before covering the vehicle. If the vehicle often sits for weeks at a time between uses, the use of a quality fuel stabilizer is recommended after each fill-up.

ECA21170

NOTICE

- **Storing the vehicle in a poorly ventilated room or covering it with a tarp, while it is still wet, will allow water and humidity to seep in and cause rust.**
- **To prevent corrosion, avoid damp cellars, stables (because of the presence of ammonia) and areas where strong chemicals are stored.**

Long term storage

Before storing the vehicle long term (60 days or more):

1. Make all necessary repairs and perform any outstanding maintenance.
2. Follow all instructions in the Care section of this chapter.
3. Fill up the fuel tank, adding fuel stabilizer according to product instructions. Run the engine for 5 minutes to distribute treated fuel through the fuel system.
4. For vehicles equipped with a fuel cock: Turn the fuel cock lever to the off position.
5. For vehicles with a carburetor: To prevent fuel deposits from building up, drain the fuel in the carburetor float chamber into a clean container. Retighten the drain bolt and pour the fuel back into the fuel tank.
6. Use a quality engine fogging oil according to product instructions to protect internal engine components from corrosion. If engine fogging oil is not available, perform the following steps for each cylinder:
 - a. Remove the spark plug cap and spark plug.

- b. Pour a teaspoonful of engine oil into the spark plug bore.
 - c. Install the spark plug cap onto the spark plug, and then place the spark plug on the cylinder head so that the electrodes are grounded. (This will limit sparking during the next step.)
 - d. Turn the engine over several times with the starter. (This will coat the cylinder wall with oil.)
WARNING! To prevent damage or injury from sparking, make sure to ground the spark plug electrodes while turning the engine over.
[EWA10952]
 - e. Remove the spark plug cap from the spark plug, and then install the spark plug and the spark plug cap.
7. Lubricate all control cables, pivots, levers and pedals, as well as the sidestand and centerstand (if equipped).
8. Check and correct the tire air pressure, and then lift the vehicle so that all wheels are off the ground. Otherwise, turn the

wheels a little once a month in order to prevent the tires from becoming degraded in one spot.

9. Cover the muffler outlet with a plastic bag to prevent moisture from entering it.
10. Remove the battery and fully charge it, or attach a maintenance charger to keep the battery optimally charged. **NOTICE: Confirm that the battery and its charger are compatible. Do not charge a VRLA battery with a conventional charger.** [ECA26330]

TIP

- If the battery will be removed, charge it once a month and store it in a temperate location between 0-30 °C (32-90 °F).
- See page 10-27 for more information on charging and storing the battery.

Specifications

Dimensions:

Overall length:
1980 mm (78.0 in)
Overall width:
700 mm (27.6 in)
Overall height:
1150 mm (45.3 in)
Seat height:
790 mm (31.1 in)
Wheelbase:
1350 mm (53.1 in)
Ground clearance:
145 mm (5.71 in)
Minimum turning radius:
2.0 m (6.56 ft)

Weight:

Curb weight:
122 kg (269 lb) (GDR155)
125 kg (276 lb) (GDR155-A)

Engine:

Combustion cycle:
4-stroke
Cooling system:
Liquid cooled
Valve train:
SOHC
Number of cylinders:
Single cylinder
Displacement:
155 cm³
Bore × stroke:
58.0 × 58.7 mm (2.28 × 2.31 in)
Starting system:
Electric starter

Engine oil:

Recommended brand:
SAE viscosity grades:
10W-40
Recommended engine oil grade:
API service SG type or higher, JASO
standard MA or MB
Engine oil quantity:
Oil change:
0.90 L (0.95 US qt, 0.79 Imp.qt)

Final transmission oil:

Type:
Motor oil SAE 10W-40 type SG or higher
Quantity:
0.10 L (0.11 US qt, 0.09 Imp.qt)

Coolant quantity:

Coolant reservoir (up to the maximum level
mark):
0.13 L (0.14 US qt, 0.11 Imp.qt)
Radiator (including all routes):
0.46 L (0.49 US qt, 0.40 Imp.qt)

Fuel:

Recommended fuel:
Unleaded gasoline (E10 acceptable)
Octane number (RON):
90
Fuel tank capacity:
5.5 L (1.5 US gal, 1.2 Imp.gal)
Fuel reserve amount:
1.1 L (0.29 US gal, 0.24 Imp.gal)

Fuel injection:

Throttle body:
ID mark:
B651

Drivetrain:

Front tire:

Type:
Tubeless
Size:
110/80-14M/C 53P
Manufacturer/model:
IRC/SCT-005F

Rear tire:

Type:
Tubeless
Size:
140/70-14M/C 62P
Manufacturer/model:
IRC/SCT-005R

Loading:

Maximum load:
153 kg (337 lb)
(Total weight of rider, passenger, cargo and
accessories)

Front brake:

Type:
Hydraulic single disc brake

Rear brake:

Type:
Mechanical leading trailing drum brake

Front suspension:

Type:
Telescopic fork

Rear suspension:

Type:
Unit swing

Electrical system:

System voltage:

12 V

Battery:

Model:

NTZ6V (GDR155)

YTZ7V (GDR155-A)

Voltage, capacity:

12 V, 5.0 Ah (10 HR) (GDR155)

12 V, 6.0 Ah (10 HR) (GDR155-A)

Bulb wattage:

Headlight:

LED

Brake/tail light:

LED

Front turn signal light:

10.0 W

Rear turn signal light:

10.0 W

Auxiliary light:

LED

License plate light:

5.0 W

Consumer information

EAU26366

Identification numbers


Record the vehicle identification number and the engine serial number in the spaces provided below for assistance when ordering spare parts from a Yamaha dealer or for reference in case the vehicle is stolen.

VEHICLE IDENTIFICATION NUMBER:

ENGINE SERIAL NUMBER:

EAU26411

Vehicle identification number

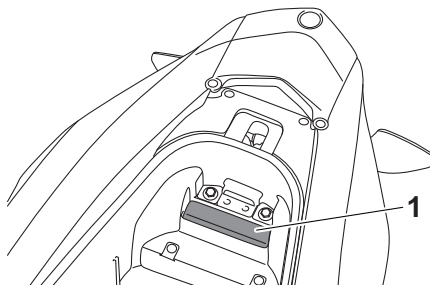

1. Vehicle identification number


The vehicle identification number is stamped into the frame.

TIP

The vehicle identification number is used to identify your vehicle and may be used to register it with the licensing authority in your area.

EAU26442

Engine serial number

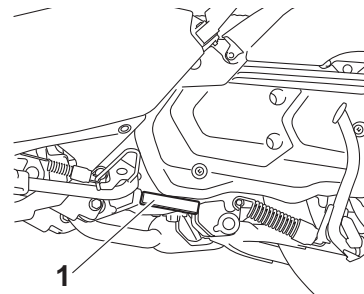

1. Engine serial number

The engine serial number is stamped into the crankcase.

EAU85400

Vehicle data recording

This model's ECU stores certain vehicle data to assist in the diagnosis of malfunctions and for research, statistical analysis and development purposes.

Although the sensors and recorded data will vary by model, the main data points are:

- Vehicle status and engine performance data
- Fuel-injection and emission-related data

This data will be uploaded only when a special Yamaha diagnostic tool is attached to the vehicle, such as when maintenance checks or service procedures are performed.

Yamaha will not disclose this data to a third party except in the following cases. In addition, Yamaha may provide vehicle data to a contractor in order to outsource services related to the handling of vehicle data. Even in this case, Yamaha will require the contractor to

properly handle the vehicle data we provided and Yamaha will appropriately manage the data.

- With the consent of the vehicle owner
- Where obligated by law
- For use by Yamaha in litigation
- When the data is not related to an individual vehicle nor owner

A

ABS (for ABS models).....7-14
 ABS warning light7-3
 Acceleration and deceleration9-3
 Activating the Stop and Start System5-1
 Air filter and V-belt case air filter
 elements.....10-15

B

Battery10-27
 Brake fluid, changing10-23
 Brake fluid level, checking10-22
 Brake lever, front7-13
 Brake lever, rear.....7-13
 Brake levers, lubricating10-24
 Brake pads and shoes, checking10-21
 Braking.....9-3

C

Cables, checking and lubricating10-23
 Care11-1
 Catalytic converter.....7-17
 CCU (Communication Control Unit)6-1
 Centerstand and sidestand,
 checking and lubricating10-25
 Clock.....7-7
 Coolant10-13
 Coolant temperature warning light7-3

D

Data recording, vehicle.....13-2
 Dimmer switch.....7-12
 Display units, switching7-6

E

Emergency mode (GDR155-A)10-37
 Engine break-in.....9-1
 Engine oil and oil strainer.....10-10

Engine overheating.....10-36
 Engine serial number.....13-1
 Engine trouble warning light.....7-3

F

Final transmission oil10-12
 Front brake lever free play,
 checking.....10-20
 Front fork, checking10-25
 Fuel.....7-16
 Fuel consumption, tips for reducing9-4
 Fuel meter7-6
 Fuel tank cap.....7-15
 Fuel tank overflow hose7-17
 Fuses, replacing10-28

H

Handlebar switches.....7-11
 Hazard switch.....7-12
 Helmet holders7-18
 Helmets2-6
 High beam indicator light7-3
 Horn switch7-12

I

Identification numbers.....13-1
 Ignition circuit cut-off system.....7-22
 Incoming call indicator light7-4
 Indicator lights and warning lights7-2

K

Key, handling of smart and
 mechanical keys.....4-3
 Keyhole shutter7-2

L

Labels, location1-1
 License plate light bulb, replacing.....10-32

M

Main switch4-7
 Main switch/steering lock7-1
 Maintenance and lubrication,
 periodic.....10-3
 Maintenance,
 emission control system.....10-2
 Matte color, caution11-1
 Menu switch.....7-12
 Multi-function display7-8
 Multi-function meter unit.....7-5

N

Notification indicator light7-4

O

Operating range of the smart key
 system4-2

P

Panels, removing and installing10-7
 Parking.....9-4
 Part locations3-1
 Power outlet.....7-20
 Precautions when using the Stop and
 Start System5-3

R

Rear brake lever free play,
 adjusting10-20
 Rear brake lever lock7-13
 Rear turn signal light bulb,
 replacing.....10-31

S

Safe-riding points.....2-5
 Safety information2-1
 Seat.....7-17
 Sidestand7-21

Smart key	4-4	Turn signal switch	7-12
Smart key battery, replacing	4-6	V	
Smart key system	4-1	Valve clearance	10-17
Smart key system indicator light	7-4	V-belt, checking	10-23
Smart key system, troubleshooting....	10-33	Vehicle identification number	13-1
Smartphone battery level meter	7-5	Vehicle lights	10-30
Spark plug, checking.....	10-8	VVA indicator.....	7-7
Special features.....	6-1	W	
Specifications	12-1	Wheel bearings, checking.....	10-26
Speedometer	7-6	Wheels	10-19
Starting off.....	9-3	Y	
Starting the engine	9-2	Yamaha Motorcycle Connect icon.....	7-5
Start switch.....	7-12		
Steering, checking.....	10-26		
Stop and Start System	5-1		
Stop and Start System indicator light	7-4		
Stop and Start System operation.....	5-1		
Stop and Start System switch.....	7-12		
Stop and Start System			
troubleshooting	10-33		
Storage.....	11-3		
Storage compartments.....	7-19		
T			
Tachometer	7-6		
Throttle grip and cable,			
checking and lubricating	10-24		
Throttle grip free play, checking.....	10-17		
Tires.....	10-18		
Tool kit.....	10-1		
Troubleshooting.....	10-32		
Troubleshooting chart	10-35		
Turn signal indicator lights	7-3		
Turn signal light bulb (front),			
replacing.....	10-30		

